



Terrain Above Ground

PVC-u above ground drainage systems



Terrain Above Ground Drainage Systems

Having pioneered the development of solvent-weld systems, Terrain soil & waste products represent the industry benchmark for quality, installation, flexibility and product innovation backed by the highest levels of customer service. Terrain systems include an extensive range of soil & waste drainage products for commercial, industrial, housing and public sector developments, all built on the strength of our Terrain brand. Systems include solvent-weld and Push-Fit options for both soil & waste drainage; overflow, WC pan and trap connectors along with a comprehensive range of adaptors and accessories. Products are available in a range of colours.



- Unique products offer unrivalled installation options
- · High quality finish, colour to match all systems
- Suitable for all types of commercial and domestic installations
- Extensive technical experience to support and advise on all aspects of design and installation
- Fully accredited product systems

As you would expect from a market leader our products come with all relevant standards including:

Manufacturing Standards

BS 5255:1989 Specification for Thermoplastics Waste Pipe and Fittings BS 4514:2001 PVC Soil and Ventilation Pipes, Fittings and Accessories BS EN 1329:2000 Plastic Piping Systems for Soil and Waste Discharge BS EN 1566:2000 Plastic Piping Systems for Soil and Waste Discharge (Chlorinated)

BS EN 12380 A1 Air Admittance Valve

BS EN 12380 A1 Air Admittance Valve (Pleura System)

BS EN 1366-3 Terrain Firetrap Sleeves and Collars

Quality Management Systems Standards

EN ISO 9001:2008 Management System

EN ISO14001:2004 Management System

BS OHSAS 18001:2007 Management System

PASS 99:2006 Integrated Management Registration











Contents

Terrain Above Ground Drainage

100 PVC-u Solvent-Weld	04 - 15
Rainwater Systems	16 - 18
100 Large Diameter	19 - 21
100P PVC-u Push-Fit	22 - 29
200 MuPVC Solvent Weld	30 - 37
300 Polypropylene Push-Fit	38 - 43
400 Traps & Pan Connectors System	44 - 51
500 Waste System Overflow	52 - 54
Accessories/Ancillaries	55 - 56
Terrain Pleura	57
Terrain Firetrap	58
General Principles	59
Sitework Instructions	60 - 61
System Connections	72 - 77
Rainwater Outlets	78 - 81
Design Considerations & Principles	82 - 83
UK Design Principles	84 - 85
Middle East Design Principles	86 - 87
Design Data - Soil & Waste Drainage	88 - 89
Design Data - Rainwater	90 - 91
Fabrication Service	92
Certifications	93
Index	94 - 100

Products marked in the product listings are available in CAD form for ready incorporation into design drawings. If you would like a disk or CD ROM in the appropriate format, simply contact the Technical Advisory Service.

Sustainable Materials

Plastics are among the most researched materials in the world and rapid technological and manufacturing developments made in recent years have allowed for continuous innovation.

Polypipe Terrain pioneered the development of PVC material for the manufacture of drainage pipes and fittings; we remain at the forefront of the industry across the globe with the use of ever-more environmentally friendly materials with no loss of mechanical characteristics.

Utilising a sustainable material composition contributes significantly to an environmentally friendly manufacturing process and gives a finished product that can be recycled in accordance with British Standards.


For further information, please refer to www.polypipe.com

100 Soil System - PVC-u (solvent-weld)

82, 110 and 160mm PVC-u soil pipes and fittings:

 Wide range of bends, branches and access fittings to meet all application requirements




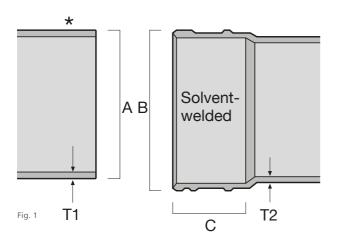

82, 110 and	160mm pipe a	nd fittings (Fi	g.1)	
Α	В	С	T1	T2
82	95	51	3.2	3.2
110	122	51	3.2	3.2
160	175	76	3.3	3.5

The pipe and socket illustrated here are for solvent weld jointing. The conversion to seal ring expansion joint is made by adding a 109 seal ring adaptor to the socket.

* Some Terrain fittings feature a groove here, as shown on the underside.

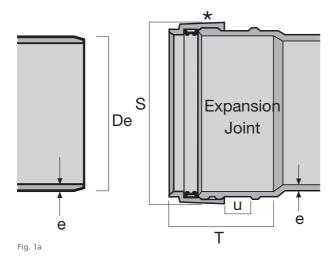

82, 110 ar	82, 110 and 160mm pipe and fittings (Fig.1a)							
De	S	e (min pipe)	e (min body of fitting)	U	Т			
82	102	3.2	3.2	18	72			
110	127	3.2	3.2	19	72			
160	184	3.3	3.5	25	101			

The 109 seal ring adaptor has been drawn in position on the socket of the 100 system fitting to illustrate its application and dimension S. The dimension U is to accommodate all Terrain holderbats.

* Some Terrain fittings feature a groove here, as shown on the underside.

	Size (mm)		T (min)	Colour	Code
SOI	L PIPE - PLAIN	ENDED			
\$	82	3m	3.2	GBW	100.3.30
\$	82	4m	3.2	GBW	100.3.40
\$	110	3m	3.2	GBW	100.4.30
\$	110	4m	3.2	GBW	100.4.40
\$	160	3m	3.3	G	100.6.30
8	160	4m	3.3	G	100.6.40


Size (mm)	А	Colour	Code
RING SEAL ADAPTOR -	converts any Terrain s	olvent socket to a ring sea	l expansion socket
82	21	GB	109.3
110	21	GBW	1 09.4
160	26	G	1 09.6


	Size (mm)	L	Z	Colour	Code
STR	AIGHT COUPL	ER DOUBLE S	SOCKET - double	e solvent socket	
\$	82	92	3	GBW	110.3
\$	110	102	3	GBW	110.4
\$	160	126	6	G	110.6


	Size (mm)	L	Z	Colour	Code	
EXPANSION COUPLER - to allow expansion in longer pipe runs						
\$	82	113	3	GBW	111.3	
\$	110	123	3	GBW	111.4	
8	160	152	6	G	<u></u>	


	Size (mm)		Colour	Code
SLIF	P COUPLER DO	OUBLE SOCKET		
\$	82	134	G	111.5.3
\$	110	144	GB	111.S.4
\$	160	175	G	🖳 111.S.6


	Size (mm)	Angle°	Z1	Z2	Colour	Code			
SW	SWEPT BEND DOUBLE SOCKET								
\$	82	921/2	102	98	GBW	101.3.92			
8	110	921/2	75	83	GBW	101.4.92			
\$	160	921/2	178	184	G	101.6.92			
\$	110	104	80	76	G	101.4.104			
♥	110	1121/2	65	63	GB	101.4.112			
\$	82	135	25	25	GBW	101.3.135			
\$	110	135	21	30	GBW	101.4.135			
\$	160	135	44	44	G	101.6.135			















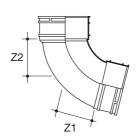















Terrain Soil System - 100 Solvent-Weld






	Size (mm)	Angle°	Z 1	Z2 (max) Z2 (min) Colou	r Code
S	PIGOT SOCK	ET BENDS	- long t	ail		
\$	82	921/2	41	152	97 G	107.3.92
\$	7 110	92½	57	197 1	10 GBW	107.4.92






	Size (mm)	Angle°	Z1	Z2 (max) Z2 (min)	Colour	Code
SP	IGOT SOCK	ET BENDS	5			
\$	110	135	42	85	GBW	107.4.135
\$	160	135	60	130	G	107P.6.135






	Size (mm)	Z1	Z2	Colour	Code			
VAR	IABLE BEND	SPIGOT/SOCK	ET - adjustable 0 -	- 25°				
\$	110	0 - 25	45	G	107.4.025			
Doub	Double spigot							
\$	110	0 - 25	45	G	101.4.025			



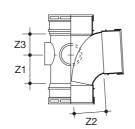

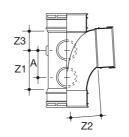

9	Size (mm) Angle°	Z1	Z2	Z3	Α	Colour		Code	
	GLE EQUA tors (see pa		CH TRI	PLE SO	CKET - d	onnect to	boss horns	using	g 117 boss	
\$	82	921/2	70	83	35		GBW		104.3.92	
\$	82	135	19	108	102		GB		104.3.135	
\$	110	921/2	82	82	54		GBW		104.4.92	
\$	110	921/2	101	96	50	74	GBW		104.4.924	
\$	160	921/2	184	178	160		G		104.6.92	
With	With boss connections									
							2 boss ho	rns	104.3.92	

3 boss horns

4 boss horns


6 boss horns

104.4.92

104.4.924

104.6.92



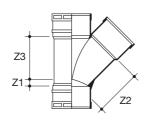

	Size (mm)	Angle°	Z1	Z2	Z3	Colour	Code
SI	NGLE EQUA	L BRANC	H - no wa	ste boss cor	nections		
	110	104	77	74	72	G	104.4.104
\$	110	135	25	137	137	GBW	104.4.135
	160	135	60	195	195	G	104AS.6.135 [†]
\$	160	135	53	198	198*	G	104.6.135

^{*}Push-Fit only

[†]Cannot be used with 109.6

Size	(mm)	Angle°	Α	Z1	Z2	Z3	Colour	Code		
SINGLE BRANCH SPIGOT OUTLET - with boss connections - 4 boss horns										
♥	110	921/2	74	103	96	50	GB	104.104.92		


Size	(mm)	Angle°	Α	В	Z1	Z2	Z3	Colour	Code	
SIN	SINGLE EQUAL BRANCH VARIABLE BOSS - Spigot outlet, 2 boss horns, 2 waste sockets									
\$	110	921/2	142	140	91	83	59	G	104.412.92	


Size	(mm)	Angle°	Α	В	Z1	Z2	Z3	Colour		Code	
SIN	SINGLE EQUAL BRANCH VARIABLE BOSS - Socket outlet										
\$	110	921/2	142	140	91	83	59	G		104.422.92	


Size (mm)	Angle°	Z1	Z2	Z3	Colour		Code			
SINGLE UNEQUAL BRANCH TRIPLE SOCKET - 2 boss horns										
♥ 160/110	921/2	59	87	62	G		104.64.92			


Size (mm)	Angle°	Z1	Z2	Z3	Colour		Code			
SINGLE UNEQUAL BRANCH TRIPLE SOCKET - No waste boss connections										
\$ 160/110	135	70	165	164	G		104.64.135			

Size (mm)	Angle°	Z1	Z2	Z3	Colour	Code
CORNER I	BRANCH TR	IPLE SOC	KET - 1 bos	s horn		
110	921/2	94	83	59	G	106.490.92




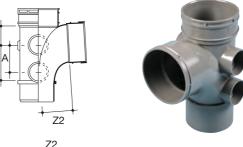








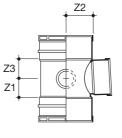






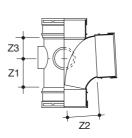




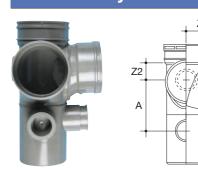

Size (mm)	Angle°	Α	Z1	Z2	Colour		Code				
CORNER BOSS BRANCH - spigot outlet - 1 boss horn, 2 waste sockets											
110	921/2	120	83	59	G		106.490.12				


Si	ize (mm)	Angle°	Α	Z1	Z2	Colour	Code				
CORNER BOSS BRANCH - socket outlet											
	110	92½	120	83	59	G	106.490.22				



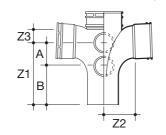


Size	(mm)	Angle°	Α	В	Z1	Z2	Z3	Colour	Code	
DO	UBLE E	BRANCH -	spigot	t outlet, 4	l boss h	orns				
♥	110	92½	75	128	203	96	50	G	<u> </u>	
Size	(mm)	Angle°	Α	В	Z1	Z2	Z3	Colour	Code	
DO	UBLE E	BRANCH -	socket	t outlet						
	82	921/2	-	-	70	83	35	G	106.3.92	
\$	110	921/2	74	-	138	95	50	G	<u> </u>	
106.3	106 3 92 with 2 hoss horns 106 4 92 with 4 hoss horns									






Size (mm)	Angle°	А	В	Z1	Z2	Z3	Colour	Code				
DOUBLE BRANCH - no bosses												
110	135	-	-	25	137	137	G	<u> </u>				
160	135	-	-	196	172	135	G	106.6.135				






	Size (mm)	Angle°	Z1	Z2	Z3	Colour	Code
DO	UBLE UNE	QUAL BRA	NCH - 2	boss horns			
\$	160/110	921/2	59	87	62	G	106.64.92





Size (mm)		Z	Colour	Code
ACCESS PIPE D	OUBLE SOCKET			
110	216	115	GBW 🔙	138.4





	Colour	Code
ACCESS PIPE SINGLE SOCKET		
₩ 110 216 166	GB 💂	139.4
160 355 279	G	139.6

	Size (mm)	Α	В	Z	Colour	Code				
ACC	ACCESS PIPE CONNECTOR - 2 boss horns									
\$	82	41	39	120	GBW	137.3				
\$	110	41	35	149	GBW	137.4				


	Size (mm)	Angle°	Z1	Z2	Colour	Code				
AC	ACCESS BEND DOUBLE SOCKET									
\$	110	92½	102	98	GBW	103.4.92				


	Size (mm)	Angle°	Z1	Z2	Z3	Colour	Code	
SINGLE ACCESS BRANCH TRIPLE SOCKET - 4 boss horns								
\$	110	921/2	99	96	50	GBW	105.4.92	


	Size (mm) L		Hole Saw Ø Colour		Code
ACC	ESS DOOR				
\$	82	114	48	G	135.3
\$	110	152	73	GB	135.4
\$	160	152	73	G	135.6


Size (mm)	Α	Z1	Z2	Colour	Code
ACCESS CAP					
82	83	16	32	GW	136.3
110	97	21	46	GBW	136.4
160	122	22	42	G	136.6


А	Colour	Code
ACCESS DOOR WITH TEST NIPPLE		
127	GBW	☐ 6592/DVW






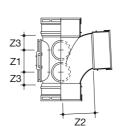






















Terrain Soil System - 100 Solvent-Weld

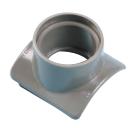





	Size (mm)	Α	Z	Hole Saw Ø	Colour	Code					
TV	TWO PART WASTE BOSS SOLVENT SOCKET										
	110/32	79	53	48	G	112.4.125					
	82/40	69	39	57	G	112.3.15					
	110/40	82	53	57	G	112.4.15					
	110/50	86	53	70	G	112.4.2					
	160/50	110	77	70	G	112.6.2					






	Size (mm)	L	Colour	Code
SOCK	(ET PLUG			
\$	110	69	GBW	130.4
$\overline{\forall}$	160	92	G	130.6

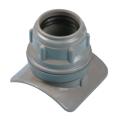



	Size (mm)	Α	Z	Hole Saw Ø	Colour	Code
SEL	F LOCKING B	OSS SEA	AL RING	SOCKET		
\$	110/32	111	60	60	G	122.4.125
\$	110/40	111	60	64	GB	122.4.15
\$	110/50	119	60	75	GBW	122.4.2






	Size (mm)	Z1	Z2	Z3	Colour	Code
SIN	GLE BOSSED	PIPE CON	INECTOR I	DOUBLE S	OCKET	
\$	110/32	30	56	31	GBW	120.4.125
\$	110/40	30	56	31	GBW	120.4.15
\$	110/50	30	59	31	GBW	■ 123.4 [†]

†Requires a boss adaptor





	Size (mm)	Z1	Z2	Z3	Colour	Code
S	INGLE BOSSED	PIPE CON	NECTOR :	SPIGOT - f	or 40mm waste	e pipe
\$	110/40	28	56	27	G	120.412.15

Terrain Soil System - 100 Solvent-Weld

Size (mm)	Z1	Z2	Z3	Colour	Code			
DOUBLE BOSSED PIPE CONNECTOR DOUBLE SOCKET - for 50mm waste pipes (40mm with adaptor)								
\$ 82/50	50	38	65	GB	120.3.2			

² x 50mm waste sockets, 2 blanking plugs.

	Size (mm) Z1 Z2 Z3 Colour						Code
TRIF	LE BOSSED P	IPE CON	NECTOR E	OUBLE S	OCKET		
8	110/40	30	56	30	GB		121.4.15

Size (mm)	Z1	Z2	Z3	Z4	Z 5	Colour		Code		
FOUR-WAY BOSS PIPE DOUBLE SOLVENT SOCKET										
110	44	40	56	55	59	GB		120.4.2		

² boss horns, 2 waste sockets.


Size (mm)	Z 1	Z2	Z3	Z4	Z5	Colour		Code		
FOUR-WAY BOSS PIPE DOUBLE SOLVENT SOCKET/SPIGOT										
110	44	40	56	55	59	G		120.412.2		

2 boss horns, 2 waste sockets.


1 Colour	Code									
UNIVERSAL SOIL MANIFOLD - for solvent waste connections										
05 G 💂	119.412.15									
	ste connections									

For connection of BS 5254/BS 5255 40mm waste pipes at floor level. Incorporates 4 inlets to accept 40mm waste pipes without need for adaptors. Use with Swivel Elbow or Swept Bend. For Push-Fit waste connections see page 21.


	Size (mm)	А	Z	Colour	Code
SOC	KET REDUCE	R - for solvent co	nnections		
\$	82/50	11	3	GW	124.3.2
\$	110/50	24	3	GBW	124.4.2
\$	110/82	11	3	GBW	124.4.3
8	160/110	22	25	GW	124.6.4

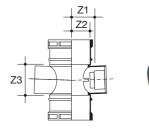




































Terrain Soil System - 100 Solvent-Weld






Size (r	nm) A	В	С	Colou	ır	Code
THERMAL	MOVEMENT I	IMITER				
82	100	129	154	Self		190.3
110	100	158	178	Self		190.4
160	100	232	260	Self		190.6






Size (mm)	А	В	С	Colour	Code
INTERMEDIATE S	UPPORT B	RACKET - to	support hor	izontal pipewo	ork
82	100	129	154	Self	<u> </u>
110	100	158	178	Self	<u></u>
160	100	232	260	Self	<u></u>






Size (mm)	А	В	C	D	Colour	Code
TWO-PIECE PIPE	BRACKE	T - galvan	ised steel			
82	140	114	76	124	Self	140.3
110	175	147	89	152	Self	140.4
160	216	196	114	197	Self	140.6








	Size (mm)	Α	В	C	D	Colour	Code
ONE	-PIECE PIPE	BRACKE	Т				
\$	82	132	110	76	117	GBW	143.3
\$	110	164	141	90	155	GBW	143.4






	Size (mm)	Α	В	C (max)	C (min)	Colour	Code
ADJU	JSTABLE PIPI	BRACK	ET PLAS	STIC-COAT	ΓED		
\$	110	99	64	108	80	В	144.4

Both have self coloured backplates.






Si	ze (mm)	А	В	С	Colour	Code
PIPE B	RACKET GA	LVANISE	DRIVE-IN			
	110	178	152	59	Self	142.4

Terrain Soil System - 100 Solvent-Weld


Size	(mm)	Α	В	Colour	Code
WEATHER	RING APRON	- for lead slates			
8	32	102	38	GB	131.3
1	10	128	48	GBW	131.4
10	60	179	51	G	131.6





Size (mm)	С	D	Colour	Code
WEATHERING APR	ON - for aspha	lt upstand		
82	204	59	G	131.3.200
110	203	46	G	131.4.200


Makes weathertight cover between soil pipe and lead slate at roof level.





Size (mm)	Plate Size	Colour	Code
WEATHERING SLATE	S - for flat roof		
82 to 110	406 x 406	Alu/B	149.16.00
WEATHERING SLATE	S - for sloping roof (min30°)	
82 to 110	406 x 406	Alu/B	149.18.22
WEATHERING SLATE	S - for sloping roof (min 17	°)	
82 to 110	406 x 406	Alu/B	149.24.22

Makes weathertight cover between soil pipe and lead slate at roof level. Available for flat or pitched roof. Colours: Base - Aluminium, Cone - Black.

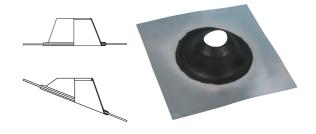



Size (mm)	A	Colour	Code
VENT COWL			
82	51	GB	150.3
110	64	GBW	150.4
160	83	G	<u></u>


Size (mm)	A	L	Colour	Code						
DUCT COWL - Stops	DUCT COWL - Stops rainwater from entering ventilation ducts									
110	205	80	GB	 152.4						
160	225	120	G	152.6						

Size (mm)	Α	В		C	Colour	Code
AUTOMATIC AIR	ADMIT	TANCE	VALVE			
110	171	107	121	110	W	153.4
82	171	107	121	110	W	153.3

NOTE: Not to be used with Terrain Pleura alternative ventilation system.





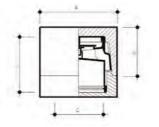









Terrain Soil System - 100 Solvent-Weld





	se on Stack Size (mm)	Α [†]	Z†	Hole Saw Ø	Colour	Code
STF	RAIGHT BOSS	ADAPTO	R RING	SEAL SOCKE	T - for waste pipe	е
\$	82 - 160	107	61	51	GBW	117.125
\$	82 - 160	107	61	51	GBW	117.15
\$	82 - 160	107	61	51	GBW	117.2



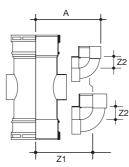


	Use on Stack Size (mm)		Z1	Z2	Hole Saw Ø	Colour	Code
BOS	S ADAPTOR	BEND	SOL	/ENT	SOCKET		
♥	82 - 160	106	82	22	51	GBW	117.15.90
♥	82 - 160	120	89	30	51	GBW	117.2.90
\$	82 - 160	-	80	11	51	G	117.2.150



Size (mm)		Colour	Code
ADAPTOR TO UNDERG	GROUND DRAIN - Pu	sh-Fit into bore of unde	rground pipe
82/110	54	В	4DW3

NOTE: As a Terrain Underground product different discount structure applies.





Size (mm)	Α	В	Z1	Colour	Code
POST FORMED S	OCKET				
82	60	98	240	G	126.3.12
110	64	127	236	G	126.4.12

NOTE: To be used with 9120 and 9119B.






Size (mm)	Z1	Colour	Code
ADAPTOR SADDLES -	for 40mm waste pipes (4	10mm with adaptor)	
110/40	29	G	115P.4

Used with 117 Waste Adaptors to enable direct connection of 32mm and 40mm waste pipe to soil pipe.





	Size (mm)	Α	В	C	Z	Colour	Code
PVC	C-U CAULKING	G BUSH					
\$	110	133	124	63	67	G	132.4

To connect soil pipe to sockets of other material. Solid caulked into sockets.

Terrain Rainwater Systems

Terrain Rainwater System




A comprehensive range of rainwater outlets designed to work in conjunction with the Terrain Soil & Waste pipes and fittings.

Note: Please refer to the Terrain Rainwater brochure for full details of guttering and downpipe ranges.


Terrain Roof Outlets

Size (mm)	Α	В	C	D			C	ode
FLAT ROOF OU Suitable for most r	TLET (La oof finish	ARGE) (es	Grey on	ly -To dra	in surfac	ce water f	rom flat roof	S
82	67	25	406	89	6	43	<u></u> 21	70.3
110	58	25	406	117	6	43	21	70.4






Size (mm)	Α	В	C	D				Code	
DOMED ROOF OUTLET (LARGE) Grey only -To drain surface water from flat roofs Suitable for most roof finishes									
82	67	25	406	89	6	43	76	2171.3	
110	58	25	406	117	6	43	76	2171.4	






Size (mm)	Α	В	C	D			Code	
FLAT ROOF OL porches, garages	JTLET (S	MALL I balconie	DIAME s. Suitab	TER) Gre le for min	ey only eral felt	' -To dra or single	in surface water from layer plastic roofs	
50	6	16	25	178	61	3	2180.2	
82	6	16	25	178	87	3	2180.3	





Size (mm)	Α	В	C	D	E	F	Code
DOMED ROOF porches, garages a	OUTLET nd small b	(SMAL alconies.	L DIAN Suitable	/IETER) (for minera	Grey or I felt or si	ily -To d ngle laye	rain surface water from er plastic roofs
50	48	16	25	178	61	3	2181.2
82	48	16	25	178	87	3	2181.3






Size (mm)	Α	В	C	D	E	F	G	Code
INVERTED ROOF OUTLET Grey only -To allow for drainage from two levels as required with inverted roof construction								
110	60	25	406	117	6	43	260	2171.4A

1	E
A T B	
-	C



Size (mm)	A	В	С	D	Е	F	G	Code
INVERT Suitable	INVERTED ROOF OUTLET Grey only -Special vented type for combined systems Suitable for most roof finishes								
	110	58	25	406	117	6	43	371	2174.44






Terrain Rainwater Systems


Balcony Outlets





Size (mm)	Α	В	С	D	E*	F	G		Code	
BALCONY OUT Connects to 82mr – 2173.3.25 for 6 When used induvi *Min size hole for	n round 8mm rou dually or	downpip und pipe at top o	e can b	e reduce	d via so	cket Ada	ptors 5.3 Bla	nking Ca	ар	
82	48	27	59	170	94	13	68		2172 3	





Size (mm)	Α	В	С	D	E*		Code
BALCONY OUT Details as 2172.3	LET Gr *Min siz	ey onl	y -For a or roof s	sphalt-fi slab	nished l	balconies	
82	48	27	59	170	94	68	2174.3



	Colour	Code
CAP FOR BALCONY OUTLET -For use with 2173.3.25 and at top of multi-storey building	d 2273.23	when used singly or
	G	9995.3



	Colour	Code
SPARE GRID FOR BALCONY OUTLET -for 2172		
	G	9990



	Colour	Code
SPARE GRID FOR FLAT ROOF OUTLET -for 2170		
	G	9981



	Colour	Code
SPARE GRID FOR DOMED ROOF OUTLET -for 2171		
	G	9980

100P Push-Fit Large Diameter


100P Push-Fit Large Diameter PVC-u




200 and 250mm PVC-u soil pipe and fittings:


- Wide range of bends, branches and access fittings
- Manufactured in accordance with BS EN 1329

200 and 250mm PVC-u soil pipe and fittings							
Α	T1						
200mm	4.9mm						
250mm	6.2mm						

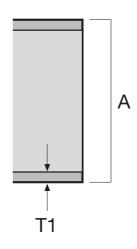


100P Push-Fit Large Diameter PVC-u

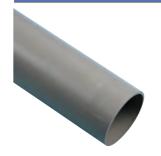




Size (mm)	L	Т	Colour	Code
SOIL PIPE - Plain en	ded pipe			
200	4m	4.9	G	100.8.40
250	4m	6.2	G	100.10.40






	DN		L1	L2	Colour	Code
STE	RAIGHT COUP	PLER - All So	ocket			
	200	4.4	106	217	G	110P.8
	250	5.5	123	254	G	110P.10



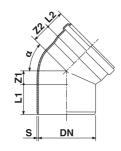

	DN	Angle°		Z1	Z2	L1	L2	Colour	Code
SPI	GOT SOC	KET BENI	D						
	200	92	4.9	105	122	100	85	G	107P.8.92
	200	135	4.9	46	64	100	84	G	107P.8.135
	250	135	6.2	58	79	125	96	G	107P.10.135



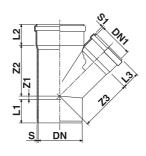


DN	DN1		S1	Z1	Z2	Z3	L1	L2	L3	Colour	Code
ALI	L SO	CKET	BRA	NCH	EQU	IAL					
200	200	4.9	-	45	256	256	100	81	81	G	104P.8.135
250	250	6.2	-	57	311	311	134	101	101	G	104P.10.135
200			-							G	104P.8.92

100P Push-Fit Large Diameter


100P Push-Fit Large Diameter PVC-u

DN	DN1	S	S1	Z1	Z2	Z3	L1	L2	L3	Colour	Code
SIN	SINGLE BRANCH SPIGOT OUTLET UNEQUAL										
200	110	4.9	3.2	17	191	200	100	86	56	G	104P.84.135
200	160	4.9	4.0	18	228	232	100	86	74	G	104P.86.135
250	160	6.2	4.0	3	250	261	131	103	74	G	104P.106.135
250	200	6.2	4.9	24	275	280	134	103	86	G	104P.108.135

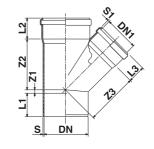




	DN	DN1		Z1	Z2	Z3	L1	L2	L3	Colour	Code
P	CESS	PIPE	AND	CO	/ER						
	200	200	4.9	105	119	119	100	86	28	G	139P.8
	250	250	6.2	120	152	152	135	101	70	G	139P.10

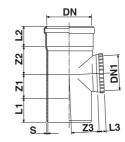



DN		Z	L1	L2	Colour	Code
REDUCERS						
200/110	4.6	40	60	59	G	124P.8.4
200/160	4.9	39	74	100	G	124P.8.6
250/110	6.1	7	56	90	G	124P.10.4
250/160	6.2	66	73	125	G	124P.10.6
250/200	6.2	39	96	134	G	124P.10.8

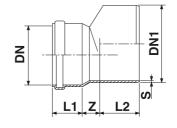




100P Soil System - PVC-u (Push-Fit)





82, 110 and 160mm pipe and fittings (Fig.2)								
Α	D	E	T1	T2				
82	100	50	3.2	3.2				
110	132	58	3.4	3.4				
160	189	70	4.1	4.1				

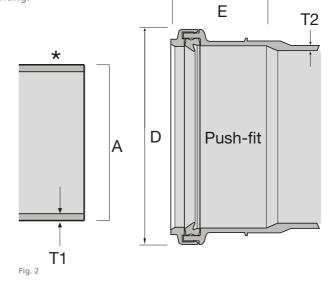

^{*} Some Terrain fittings feature a groove here, as shown on the underside.

100P Push-Fit

	Size (mm) L1		T (min)	Colour	Code						
SOI	SOIL PIPE - single socket ended										
\$	82	3m	3.2	G	100P.3.30						
\$	82	4m	3.2	G	100P.3.40						
\$	110	3m	3.2	GB	100P.4.30						
\$	110	4m	3.2	GB	100P.4.40						
\$	160	3m	3.3	G	100P.6.30						
\$	160	3m	3.3	G	100P.6.40						

	Size (mm)	L	Colour	Code					
SLIP	SLIP COUPLER DOUBLE SOCKET								
\$	82	134	G	🔲 111.S.3					
\$	110	144	GB	111.5.4					
\$	160	210	G	111.5.6					


	Size (mm)		Z	Colour	Code				
STRAIGHT COUPLER DOUBLE SOCKET - with central stop									
\$	82	103	6	G	110P.3				
\$	110	129	6	GB	110P.4				
\$	160	188	10	G	110P.6				

	Size (mm)	L1	L2	Z	Colour	Code				
PIPE END SOCKET/SPIGOT										
	82	91	39	4	G	111P.3				
\$	110	107	48	3	GB	111P.4				


	Size (mm)	Angle°	L1	Z1	Z2	Colour	Code
SW	EPT BEND SI	PIGOT/SC	CKET				
\$	82	921/2	149	109	161	G	101P.3.92
\$	110	921/2	142	85	145	GB	101P.4.92
\$	160	921/2	215	135	215	G	101P.6.92
\$	110	112½	152	104	184	G	101P.4.112
\$	82	135	76	36	89	G	107P.3.135
\$	110	135	89	42	119	GB	107P.4.135
\$	160	135	140	60	130	G	107P.6.135

	Size (mm)	Angle°	L1	Z1	Z2	Colour	Code			
TIGHT RADIUS BEND SPIGOT/SOCKET										
\$	110	921/2	113	65	197	G	107P.4.92			


















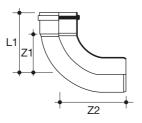













Size (mm)	Angle°	Colour	Code
2 PART VARIBLE BEND)		
110	20-871/2	G	107P.4.VAR





Size	(mm)	Angle°	L1	L1	Z1	Z2	Z3	Colour	Code
SINGLE BRANCH SPIGOT OUTLET - with spigot bosses, 2 boss horns									
\$	82	92½	225	125	54	85	131	G	104P.3.92






Size	(mm)	Angle	L1	L1	Z1	Z2	Z3	Α	В	Colour	Code
SINGLE BRANCH SPIGOT OUTLET - with spigot bosses, 5 boss horns											
	110	921/2	278	152	58	96	164	19	57	GB	104P.4.92
8	160	921/2	440	242	90	155	260			G	104P.6.92


SINGLE BRANCH SPIGOT OUTLET - with spigot bosses, 2 boss horns									
	110	1121/2	349	165	95	95	184	G	104P.4.112



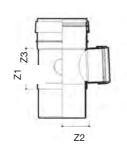

Size (mm)	Z1	Z2	Z3	Colour	Code				
SINGLE BRANCH UNEQUAL SPIGOT OUTLET - 2 boss horns									
160	75	87	62	G	104P.64.92				




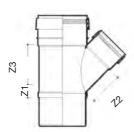

Size (ı	nm)	Z1	Z2	Z3	Colour	Code				
SINGLE BRANCH UNEQUAL SPIGOT OUTLET										
	160	14	173	163	G	104P.64.135				


100P Push-Fit

Size	(mm)	Angle°	L1	L2	Z1	Z2	Z3	Colour	Code
SII	NGLE E	QUAL	BRAN	CH PL	AIN - r	no boss	connecti	ons	
	82	135	269	180	97	102	94	G	104P.3.135
\$	110	135	328	215	168	168	113	G	104P.4.135
	160	135	412	270	245	195	92	G	104P.6.135

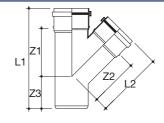



Size (mm)	Α	Z1	Z2 Colour		Code							
CORNER BOSS BRANCH												
110	157	119	55	G	106E.490.12							

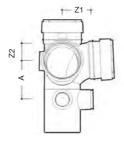




:	Size (mm)	Z1	Z2	Z3	Colour	Code						
CORN	CORNER BRANCH SPIGOT OUTLET											
	110	101	84	50	G	106P.490.92						






Siz	ze (mm)	Angle	Z1	Z2	Z3	Colour	Code				
SINGLE BRANCH SOCKET OUTLET											
	110	135	27	136	137	G	104E.4.135				

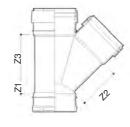




	Size (mm)	Angle	Z1	Z2	Z3	Colour	Code					
BRA	BRANCH SOCKET OUTLET											
\$	110	92	87	81	56	G	104E.4.92					

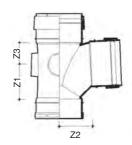








	Size (mm)	Α	В	Z1	Z2	Z3	Colour	Code				
SIN	SINGLE EQUAL BRANCH VARIABLE BOSS											
\$	110	146	149	96	86	57	G	104E.412.92				






	Size (mm)	Z1	Z2	Colour	Code							
ADJ	ADJUSTABLE BEND SPIGOT OUTLET											
\$	110	106	87	G	107P.4.025							






Size (mm)	Angle°	L1	L2	Z1	Z2 Z3	Colour	Code			
DOUBLE EQUAL BRANCH SPIGOT OUTLET										
110	92.5	287	172	66	124 173	G	106P.4.92			






Size (m	m) L1	L2	Z1	Colou	r Code							
ACCESS PIPE AND COVER SINGLE SOCKET												
83 193 97 153 G 139P.3												





	Size (mm)	L1	L2	Z1	Colour	Code					
ACCESS PIPE AND COVER SINGLE SOCKET											
\$	110	222	114	175	GB	139P.4					






Size (mm)	L1	L2	Z1	Colour	Code						
 ACCESS PIPE AND COVER SINGLE SOCKET Access door aperture size: 172 x 130mm diameter - secured by 2 scews											
\$ ♥ 160 366 198 305 G 139P.6											


100P Push-Fit

	Size (mm)	Angle°	L1	L2	Z1	Z2	Colour	Code				
ACCESS BEND SINGLE SOCKET Access door aperture size: 110 x 80mm diameter -												
Secui	secured by locking mechanism (use self tapping screw for anti-vandal locking)											
\$	110	921/2	41	69	91	157	GB	103P.4.92				






	Size (mm)	L1	L2	Z1	Z2	Z3	Colour	Code
4 bo	ACCESS BEND SINGLE EQUAL BRANCH SINGLE OUTLET - with waste bosses, 4 boss horns. Access door aperture size: 114 x 80mm diameter - secured by locking mechanism (use self tapping screw for anti-vandal locking)							
	82	225	-	176	74	131	G	105P.3.92
8	110	136	74	87	105	172	G	105P.4.92






	Size (mm)	Angle	Z1	Z2	Colour	Code
DO						
8	110	92.5	89	145	G	101D.4.92

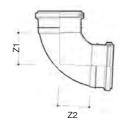




А	Colour	Code				
ACCESS DOOR WITH TEST NIPPLE - standard for manometer connection	oval access door wit	h test nipple				
127 GB 6592/DVV						





Size (mm)	Α	Z1	Z2	Colour	Code
ACCESS PIPE AN Access door aperture				red by 2 scews	
82	81	26	13	G	136P.3
110	102	34	10	GB	136P.4
160	134	34	10	G	136P.6






Terrain Soil System - 100P Push-Fit


NEW - Now allows back-to-back dual connection of similar and/or dissimilar pipe diameters.





	Size (mm)	L1	Hole Saw Ø	Colour	Code
S	TRAP-ON BOSS -	for waste	e pipe		
	110/32	116	60 (part no. 9105.237)	GB	112P.4.125
	110/40	116	60 (part no. 9105.237)	GB	112P.4.15
	110/50	120	60 (part no. 9105.237)	GB	112P.4.2






	Use on Stack Size (mm)		Ζ [†]	Hole Saw Ø	Colour	Code
BOS	S ADAPTORS	STRAIG	i HT - for	r waste pipe		
\$	82 - 160	107	61	51	GB	117.125
\$	82 - 160	107	61	51	GB	117.15
\$	82 - 160	107	61	51	GB	117.2






Size (mm)	Z1	Hole Saw Ø	Colour	Code
ADAPTOR SADDLES	- for 40mm	waste pipe		
110/40	29	51	G	☐ 115P.4





S	ize (mm)	L1	L2	Z1	Colour	Code						
LEV	LEVEL INVERT TAPER											
\$	82/50	117	44	15	G	124P.3.2						
\$	110/50	136	45	16	GB	124P.4.2						
8	110/82	140	55	18	G	124P.4.3						
\$	160/110	233	75	44	G	124P.6.4						






Size (mm)	Z1	Z2	Z3	Colour	Code
SHORT BOSSED	PIPE				
82	145	48	97	G	123P.3
110	212	43	110	GB	123P.4

100P Push-Fit


Terrain Soil System - 100P Push-Fit

Size (mm)	Z1	Z2	Z3	Colour	Code
82mm BOSS PIP	E RING SE	AL			
82	30	57	46	G	123P.312

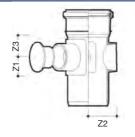




Size (mm)	Z1	Z2	Z3	Z4	Z5	Colour	Code
FOUR-WAY BOSS	S PIPE	PUSH	-FIT S	ОСКЕ	T/SPIG	iOT - 2 boss horr	าร
110	44	40	56	55	59	G	120P.412.2

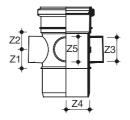



Size (mm)	L1	L2	Z1	Colour	Code
TRIPLE BOSS CO	LLAR				
110	44	40	56	GB	120P.4.15





	Size (mm)	L	Colour	Code
SOCI	KET PLUG			
\$	110	69	GB	130.4
\$	160	92	G	130.6






Size (mm)	L1	L2	L3	L4	Z1	Colour	Code
UNIVERSAL SOIL MANIFOLD - for Push-Fit waste connections, for solvent waste connections see page 11							
110	228	189	199	217	105	G	119P.4.15

For connection of BS EN 1566/BS 5255 32mm and 40mm waste pipes at floor level. Incorporates 4 inlets to accept 32mm or 40mm waste pipes without need for adaptors. Use with Swivel Elbow or Swept Bend. Complete with 4 sealing gaskets and 3 removable plugs. For solvent waste connections see page 11.

Refer to page 12 for bracketing options.

Bracketry available to both solvent weld and Push-Fit systems.

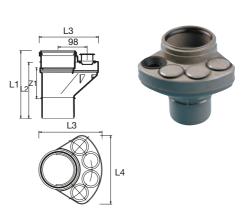

Terrain Waste System

200 Waste System - MuPVC (Solvent-Weld)




Solvent-weld MuPVC system:

- 32, 40 and 50mm integrated systems
- Wide range of bends and adaptors
- Integrated floor gullies

All Terrain fittings and extrusions are manufactured to BS EN ISO 9001: 2000 certification.

32, 40 and	32, 40 and 50mm pipe and fittings (Fig.3)						
Nom.	Α	В	С	T1 (min)	T2 (min)		
32mm	36	42	24	1.8	1.8		
40mm	43	49	27	1.9	1.9		
50mm	56	62	30	2.0	2.0		

The pipe and socket illustrated here are for solvent weld jointing.

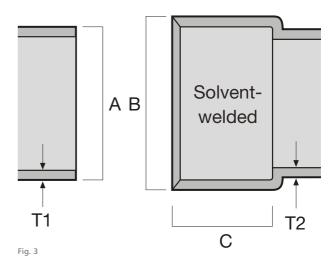

	Size (mm)	L1	T (min)	Colour	Code				
WAS	WASTE PIPE - plain-ended								
\$	32	3m	1.8	GW	200.125.30				
\$	32	4m	1.8	GBW	200.125.40				
\$	40	3m	1.9	GW	200.15.30				
\$	40	4m	1.9	GBW	200.15.40				
\$	50	3m	2.0	GW	200.2.30				
\$	50	4m	2.0	GBW	200.2.40				

+	

Size (mm)	А	Colour	Code			
SEAL RING ADAPTOR - to convert 50mm 207.2 spigot socket bends to expansion fitting						
50	65	GW	209.2			

_	l	
Α		
_		



	Size (mm)	L	Z	Colour	Code
STRA	AIGHT COUPL	ER DOUBLE S	OCKET		
\$	32	52	2	GBW	210.125
\$	40	58	2	GBW	210.15
\$	50	65	2	GBW	210.2





	Size (mm)	L	Z	Colour	Code		
UNION DOUBLE SOCKET - threaded union for easy disconnection if required							
\$	32	59	8	G	211.125		
\$	40	65	8	G	211.15		
\$	50	73	8	G	211.2		






	Size (mm)	L	Z	Colour	Code
EXPA	ANSION COUP	LER SEAL RI	NG AND SOLVI	ENT SOCKET	
\$	32	67	4	GW	225.125
\$	40	70	4	GW	225.15
	50	77	4	GW	225.2






	Size (mm)	Z	Colour	Code
SPIG	OT SOCKET COL	JPLER		
\$	32	27	GW [227.125
\$	40	30	GW [227.15
	50	35	G	227.2







Terrain Waste System



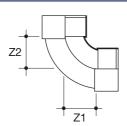












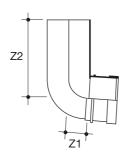












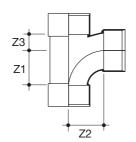

	Size (mm)	Angle°	Z2	Z2	Colour	Code
SWI	EPT BEND DO	UBLE SOC	KET - for	91¼° swept b	end, 91¼°, 135°	° and 165° as standard
\$	32	911/4	34	34	GBW	201.125.91
\$	40	911/4	38	38	GBW	201.15.91
\$	50	911/4	45	45	GBW	201.2.91

	Size (mm)	Angle°	Z2	Z2	Colour	Code
SW	EPT BEND DO	OUBLE SOC	KET - for	135° swept b	end	
\$	32	135	10	10	GBW	201.125.135
\$	40	135	11	11	GBW	201.15.135
\$	50	135	14	14	GBW	201.2.135
\$	32	165	5	5	G	201.125.165
♥	40	165	5	5	G	201.15.165
♥	50	165	6	6	G	201.2.165

	Size (mm)	Angle°	Z2	Z2(max)	Z2(min)	Colour	Code
	GOT/SOCKET °, 130° and 15			change pipe	direction i	n limited-space	situations,
	32	91½	19	92	46	GBW	207.125.92
\$	40	921/2	21	95	52	GBW	207.15.92
	50	921/2	29	102	64	GW	207.2.92
	32	135	8	30	-	GBW	207.125.135
	40	135	11	38	-	GBW	207.15.135
	50	135	13	46	-	GW	207.2.135
	32	150	8	52	29	GB	207.125.150
\\	40	150	9	49	33	GB	207.15.150

	Size (mm)	Angle°	Z2	Z2	Colour	Code
KNU	JCKLE BEND	DOUBLE S	OCKET			
\$	32	911/4	19	19	GBW	202.125.91
\$	40	911/4	22	22	GBW	202.15.91

	Size (mm)	Angle°	Z1	Z2	Z3	Colour	Code
SWE	PT CROSS A	LL SOCKE	Г				
\$	40	911/4	44	44	20	GW	206.15.91
\$	50	911/4	51	51	25	GW	206.2.91
\$	50	135	13	71	71	G	206.2.135

	Size (mm)	Angle°	Z1	Z2	Z3	Colour	Code
SW	EPT TEE ALL	SOCKET - 9	11¼°, 1	35° and	165° as	standard	
\$	32	911⁄4	30	30	19	GBW	204.125.91
\$	40	911/4	32	35	22	GBW	204.15.91
\$	50	911⁄4	43	43	29	GBW	204.2.91
\$	32	135	8	48	48	GW	204.125.135
\$	40	135	10	57	57	GW	204.15.135
\$	50	135	13	71	71	GBW	204.2.135

	Size (mm)	Α		Z	Colour	Code
	EL INVERT TA Larger end spigo			-	dard fitting to ac	cept a smaller size
	40/32	4	73	47	GW	223.15.125
\$	50/32	10	98	73	GW	223.2.125
\\$	50/40	7	62	62	GW	223.2.15


	Size (mm)	А	Z	Colour	Code
SOC	KET REDUCE	?			
\$	40/32	0	3	GBW	224.15.125
\$	50/32	7	6	GBW	224.2.125
\$	50/40	4	3	GBW	224.2.15


Size (mm)	А	В	Colour	Code
PIPE FIXING CLIP				
32	33	54	GBW	240.125
40	37	60	GBW	240.15
50	43	76	GBW	240.2


Size (mm)	Α	В	Colour	Code
EXPANSION FITTING points along pipework		CLIP - to secure con	trol thermal exp	pansion at regular
32	33	54	GW	242.125
40	37	60	W	242.15
50	43	76	GW	242.2


	Size (mm)	L	Colour	Code
ACC	ESS PLUG			
	32	47	GBW	237.125
\$	40	54	GBW	237.15
	50	56	GBW	237.2


Si	ze (mm)	Α	В	Colour	Code
WEATH	IERING APRO	N			
	50	76	38	G	231.2

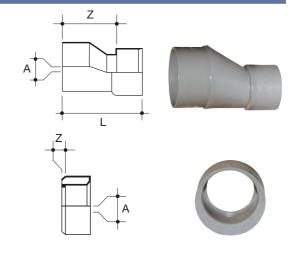

















Terrain Waste System

Terrain Waste System - 200 Solvent-Weld






Size (mm)	A	Colour	Code
VENT COWL			
50	34	GW [250.2






Size (mm)	Α	В		L1	C	D	Colour		Code
AUTOMATIC AII	R ADIV	IITTA	NCE	VAL	/E - a	llows	air into waste sys	tem wh	nen negative
pressure occurs, he	pressure occurs, helps prevent syphonage of traps								
50	56	26	74	55	25	25	W		253.2

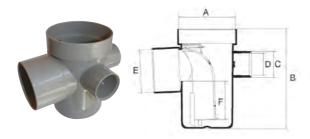

Size (mm)	Α	В	С	D			Colour	Code		
	TRAPPED FLOOR GULLY * - under-floor trap (e.g. for shower areas) with 3 sockets to accept 40mm or 50mm waste pipe e.g. for shower and wash down areas									
110/82	110	169	51	43	82	50	GT	281.43		
160/110	160	169	51	43	110	50	GT	281.64		
110/82	110	194	64	56	82	75	GT	279.432#		
#2" Inlets only	"2" Inlets only. Refer to page 33 for socket reducers if required									


Seal depth: 50-75mm. Cleaning access via removable baffle with integral gasket to maintain airtight seal.





Size (mm)	Α	В	Z1	Z2	Colour	Code
FLOOR GULLY areas). Comprises						floor (e.g. in shower
110 PVC	50 x 150	110	14	48	GW	282.6
110 SS	50 x 150	110	14	48	Self	283.6





Size (mm)	Colour	Code
SEALED GULLY RAISING PIECE *		
110	GW	284.6






Size (mm)	Colour	Code
SEALED GULLY RAISING PIECE *		
110	Self	285.6

^{*} See pages 37 & 38 for installation detail

Terrain Waste System - 200 Solvent-Weld


Size (mm)	Α		Colour	Code
ADAPTOR TO UNDI		DRAIN - push-fit	connection into p	pipes with nominal
100mm bore, external u	ise only			
32/40/50	8	40	В	☐ 4DW200

Note: As a Terrain Underground product different discount structure applies.




Size (mn	n) A	В	Z	Colour	Code
POST FORME	D STOCKET	- supplied	with seal rin	g	
50	70	42	358	G	226.2

Note: Use with 9132.2

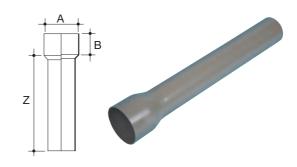


Size (mm)	Α	В	C	D	Colour	Code
CAULKING BUSH Solvent-weld to pipe		nnecting	MuPVC v	vaste pipe	to 50mm socke	et of other material.
32/42/50	43	36	56	70	G	232






	Size (mm)	Α		Z	Colour	Code			
	REVERSE NUT ADAPTOR - for solvent-weld connection of MuPVC waste pipe (or waste fitting) to BSP male threaded fitting or pipe								
IILLII	ilg) to bar iliale til	reaueu iitt	ing or pipe						
\Diamond	32/32	15	50	11	W	218.125			
\$	40/40	15	53	11	W	218.15			






	Size (mm)	Α	L	Z	Colour	Code
	WASTE TO M ection of MuPVC					t - for solvent-weld fitting
\$	32/32	23	51	3	G	212.125
\$	40/40	23	54	3	G	<u></u>
♥	50/50	23	57	3	G	212.2





Terrain Waste System






Size (mm)	Α	Z	Colour	Code
		ligot and threa ting to BSP thread		ent-weld
\$ 32/32	23	3	G	216.125
\$ 40/40	23	3	G	216.15
\$ 50/50	23	3	G	216.2






Size (mm)	А	L	Z	Colour	Code
				readed socket ded female pipe or	- for solvent-weld
\$ 32/32	19	48	3	G	<u></u>
\$ 40/40	19	51	3	GW	<u>213.15</u>
\$ 50/50	19	54	3	GW	<u></u>






	Size (mm)	Α	Z	Colour	Code
200 WASTE TO FEMALE IRON - spigot and threaded socket - for solvent-weld connection of MuPVC waste pipe or fitting to BSP threaded female pipe or fitting					
\$	32/32	19	6	G	217.125
\$	40/40	19	6	G	217.15
\$	50/50	19	6	GW	217.2

200 Solvent-Weld

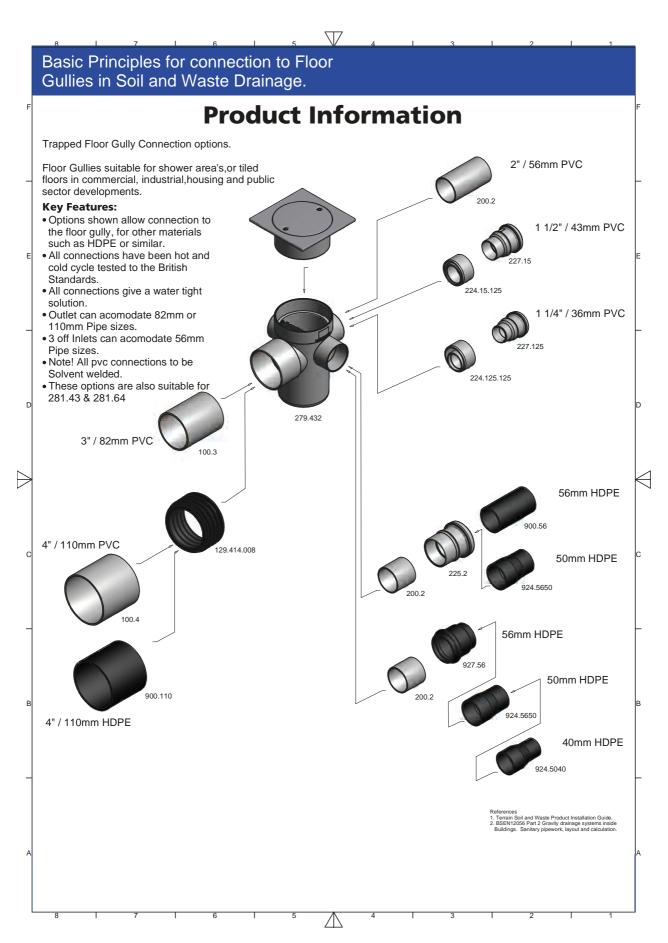

Terrain Waste System

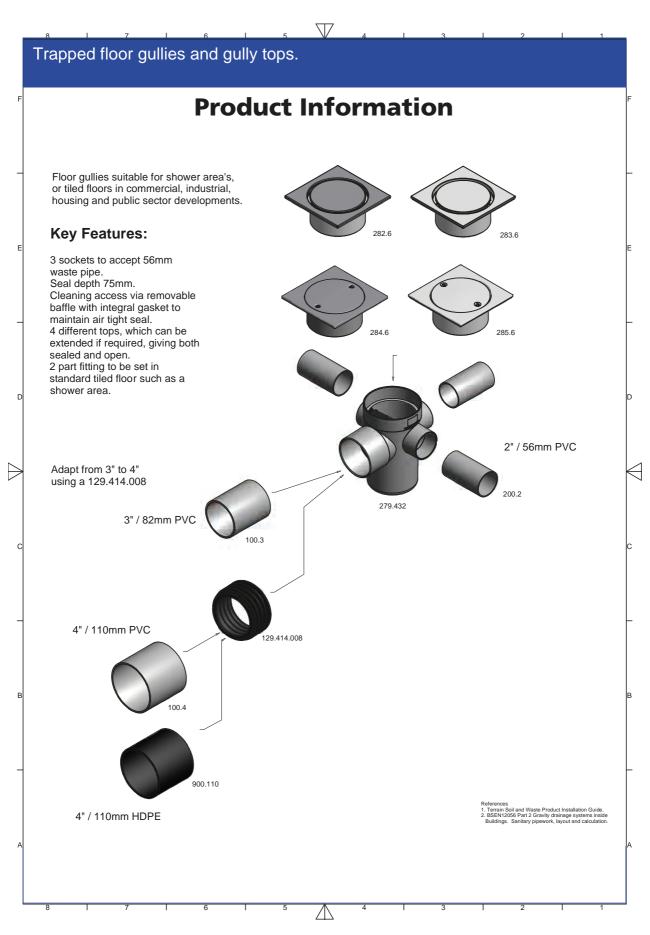

200 Solvent-Weld

Terrain Waste System

300 Waste System - Polypropylene (Push-Fit)



Push-fit polypropylene system:

- 32 and 40mm integrated systems
- Quick and easy to install
- Saves time and labour costs
- Resistant to most oils, bleaches and detergents
- Wide range of bends and fittings

32 and 40mm pipe and fittings (Fig.4)					
Nom.	Α	D	E	T1 (min)	T2 (min)
32mm	35	41	20	1.8	1.8
40mm	41	47	23	1.9	1.9

^{*} Some Terrain fittings feature a groove here, as shown on the underside.

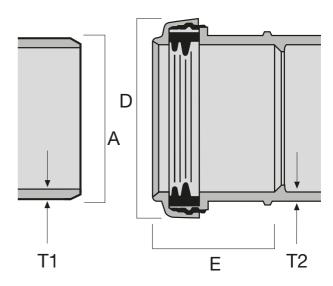


Fig. 4 Seal ring jointing

300 Push-Fit

Terrain Waste System - 300 Push-Fit

Size (mm)		T (min)	Colour	Code
WASTE PIPE - plain				
32	3m	1.8	W	300.125.30
40	3m	1.9	W	300.15.30

Size (mm)	L	Z1	Colour	Code		
STRAIGHT COUPLER DOUBLE SOCKET						
32	80	2	W	310.125		
40	80	2	W	310.15		


Size (mm)	Angle°	Z1	Colour	Code			
SWEPT BEND DOUBLE SOCKET - for 91¼° swept bend, 91¼° and 135° as standard							
32	911/4	55	W	301.125.91			
40	911/4	55	W	301.15.91			

Size (mm)	Angle°	Z1	Colour	Code		
SWEPT BEND DOUBLE SOCKET - for 135° swept bend, 91¼° and 135° as standard						
32	135	10	W	301.125.135		
40	135	11	W	301.15.135		

Size (mm)	Angle°	Z1	Colour	Code		
KNUCKLE BEND 90° DOUBLE SOCKET						
32	90	20	W	302.125.90		
40	90	23	W	302.15.90		

Size (mm)	Angle°	Z1	Z2	Colour	Code		
SWIVEL ELBOW BEND 90° SINGLE SOCKET/SPIGOT							
32	90	30	60	W	307.125.90		
40	90	25	60	W	307.15.90		

Size (mm)	Angle°	Z1	Z2	Z3	Colour	Code	
SWEPT TEE 911/	SWEPT TEE 91¼°						
32	911/4	25	30	35	W	304.125.91	
40	911/4	30	33	40	W	304.15.91	

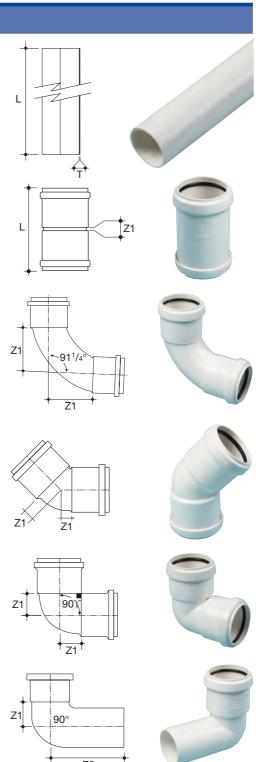

Z1


Z3

91¹/41

Terrain Waste System


Terrain Waste System - 300 Push-Fit






Size (mm)	Z1	Colour	Code
LEVEL INVERT TAPER	- to reduce waste socket	to accept smaller dian	neter waste pipe
40/32	35	W	323.15.125
50/32	35	W	323.2.125
50/40	35	W	323.2.15



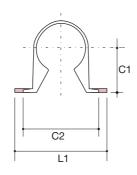


Size (mm)	L1	C1	C2	Colour	Code		
PIPE AND FITTING CLIP							
32	70	34	54	W	340.125		
40	77	37	61	W	340.15		





Size (mm)	L1	Z1	Colour	Code
ACCESS PLUG				
32	55	17	W	337.125
40	49	17	W	337.15





Size (mm)	L1	Z1	Colour	Code
TANK CONNECTOR with 2 sealing washers		ng push-fit polypro	oylene pipe to wa	iter tank, supplied
32	24	7	W	311.125
40	24	7	W	311.15

300 Push-Fit

Terrain Traps & Pan Connectors

400 Traps System

As part of Terrain All Round Drainage Solutions, a comprehensive new range of traps and pan connectors has been introduced. All products are manufactured in the UK and carry the kitemark.

Polypropylene traps

- Range of 40 traps
- 32mm & 40mm polypropylene traps
- Premium quality
- Kitemarked
- Manufactured to BS 3943
- Manufactured in the UK
- Pipe stiffener with every trap
- Range includes telescopic and anti siphon traps


Pan connectors

- Wide range of 30 pan connectors
- Push-Fit and solvent weld
- Premium quality
- Kitemarked
- Manufactured to BS 3943
- Manufactured in the UK
- Range includes variable degree and offset connectors



32, and 40mm sockets (Fig.5)						
Size	А	B (min)				
32mm	55	42				
40mm	65	49				

Tubular 'S' traps limit		
Part no.	C (max)	C (min)
432.125	136	50
432.15	150	60

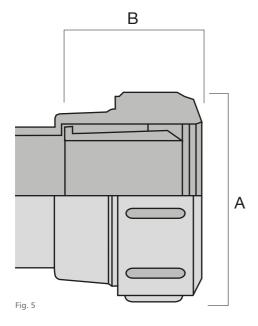

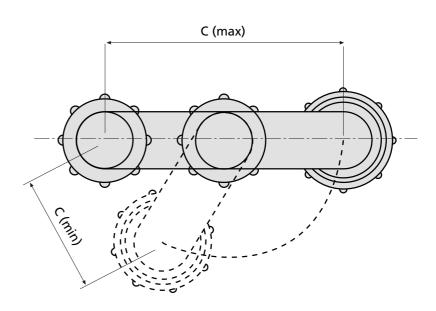


Fig. 5a

400 System

	Size (mm)	Z2	В		Colour	Code
ВОТ	TLE TRAP - 7	5mm water s	eal			
\$	32	39	26	152	W	411.125
\$	40	40	33	160	W	411.15


	Size (mm)	Z2	В	L	Colour	Code
ВОТ	TLE TRAP AN	TI-SYPHO	N - 75mm	water seal		
\$	32	39	26	155	W	411AS.125
\$	40	40	33	163	W	411AS.15

	Size (mm)	Z2	В	L	Colour	Code
RESI	EALING BOTT	LE TRAP	- 75mm wa	ter seal		
\$	32	39	26	151	W	415.125
\\$	40	40	33	163	W	415.15


	Size (mm)	Z2	В	L	Colour	Code
BOT	TLE TRAP - A	DJUSTABI	E TELES	COPIC - 75mr	m water seal	
\$	32	39	26	168 - 268	W	411T.125
\$	40	40	33	173 - 272	W	411T.15

	Size (mm)	Z2	В		Colour	Code
BOT	TLE TRAP A	NTI-SYPHO	N - ADJ	USTABLE TEL	ESCOPIC - 7	5mm water seal
\$	32	39	26	168 - 268	W	421AS.125
\$	40	40	33	173 - 272	W	421AS.15

	Size (mm)	Z2	В	L	Colour	Code
RES	EALING BOTT	TLE TRAP -	ADJUST	TABLE TELES	COPIC - 75mi	m water seal
\$	32	39	26	168 - 268	W	421.125
\$	40	40	33	173 - 272	W	421.15

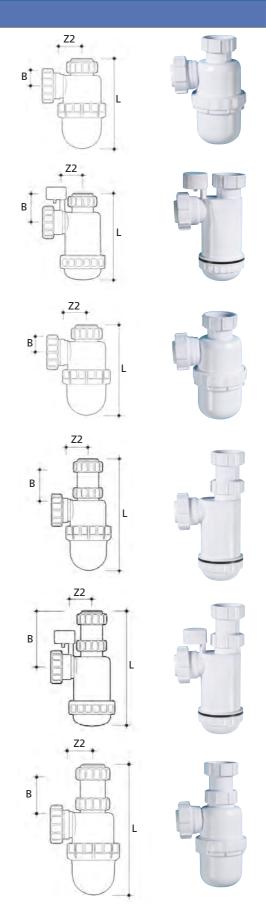


Terrain Traps & Pan Connectors

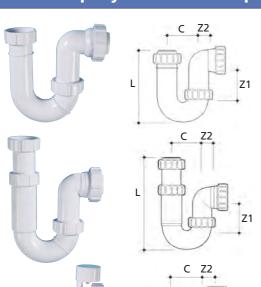

	Size (mm)	L	C	Z1	Z2	Colour	Code
TUB	ULAR SWIVE	L P TRA	.P - 75m	m water	seal		
\$	32	135	57	57	24	W	431.125
\$	40	140	64	64	30	W	431.15

		Z1		Colour	Code
TUBULAR SWIVEL PT	RAP - AD.	JUSTABI	LE TELE	SCOPIC - 75mm	n water seal
♡ 32 142 -	242 57	57	24	W	431T.125
♥ 40 150 -	250 64	64	30	W	431T.15


:	Size (mm)	L	С	Z1	Z2	Colour	Code
TUBL	JLAR SWIVE	L P TRA	P ANTI	I-SYPHO)N - 75m	m water seal	
\$	32	135	57	57	24	W	431AS.125
\$	40	140	64	64	30	W	431AS.15



	Size (mm)	Z1	Z2	Colour	Code
РТО	S TRAP CON	VERSION BEN	ID - to convert tu	bular P traps to S t	raps
\$	32	54	86	W	407.125.90
\$	40	60	90	W	407.15.90


	Size (mm)	L	C	Z 1	Z2	Colour	Code			
TUBULAR SWIVEL S TRAP - 75mm water seal										
\$	32	135	111	54	57	W	432.125			
\$	40	142	127	61	64	W	432.15			

	Size (mm)	L	Z1	Z2	Z3	Colour	Code		
RUNNING TRAP - 75mm water seal									
\$	32	118	28	60	28	W	445.125		
\$	40	124	30	64	30	W	445.15		

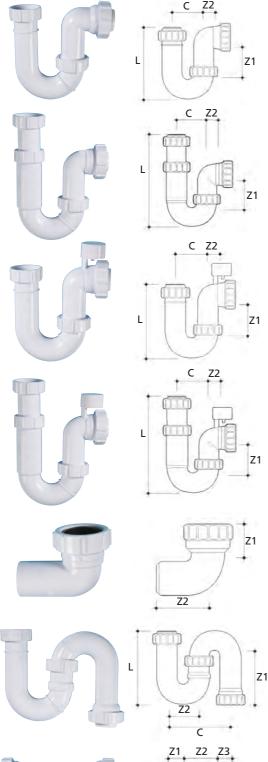


400 System

	Size (mm)		Z1	Z2	Z3	Colour	Code
RU	NNING TRAP	ANTI-SY	PHON	- 75mm	water seal		
\$	32	118	28	60	28	W	445AS.125
8	40	124	30	64	30	W	445AS.15

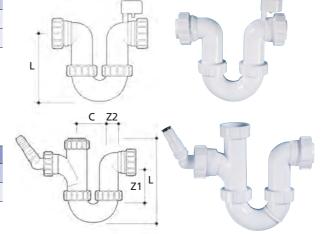


	Size (mm)		C	Z1	Z2	Colour	Code			
WASHING MACHINE HALF TRAP - 75mm water seal with adaptor										
\$	40	164	57	64	24	W	433.15			


	Size (mm)	L	C	Z1	Z2	Colour	Code
WA	SHING MACH	IINE HA	LF TRA	P ANTI	-SYPHO	N - 75mm water	seal with adaptor
\$	40	164	57	64	24	W	433AS.15




	Size (mm)	L	L2	С	Z1	Z2	Colour	Code	
WASHING MACHINE TRAP WITH UPSTAND - 75mm water seal with 0.6m upstand and 2 clips									
8	40	600	126	57	64	24	W	434.15	

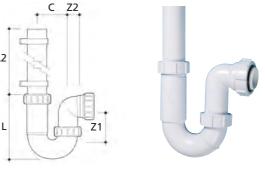

	Size (mm)	L	L2	C	Z1	Z2	Colour	Code		
WASHING MACHINE TRAP ANTI-SYPHON WITH UPSTAND - 75mm water seal with 0.6m upstand and 2 clips										
8	40	600	126	57	64	24	W	434AS.15		

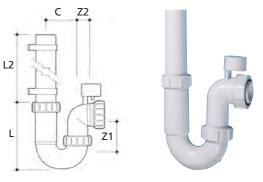


:	Size (mm)	L	Z1	Z2	Colour	Code
BATH	TRAP WITH	CLEANII	NG EYE - 2	0mm water :	seal	
\$	40	65	102	12	W	455.15





Terrain Traps & Pan Connectors

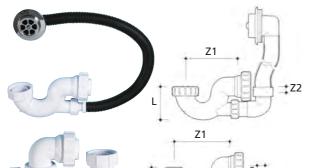

	Size (mm)	L	Z1	Z2	Colour	Code
BATH	TRAP C/W	OVERFLO	W HOSE A	ND CP RO	OSE - 20mm wate	r seal
\$	40	65	102	12	W	456.15


	Size (mm)		C	Z1	Z2	Colour	Code			
LOW LEVEL BATH TRAP - 38mm water seal										
\$	40	85	21	120	70	W	457.15			




	Size (mm)		C	Z1	Z2	Colour	Code
LOV	V LEVEL BATH	I TRAP	C/W O	VERFLO	W HOSE	AND CP ROS	E - 38mm water seal
\$	40	85	21	120	70	W	459.15



Size (mm)	L	С	Z1	Z2	Colour	Code			
 LOW LEVEL BATH TRAP ANTI-SYPHON C/W OVERFLOW HOSE AND CP ROSE - 75mm water seal									
\$ 40	85	58	120	102	W	451.15			



	Size (mm)	Α	В		Colour	Code				
SHOWER TRAP - 19mm water seal, 70mm grid										
\$	40	88	40	99	W	482.15				
\$	40	88	40	99	C/P	483.15				

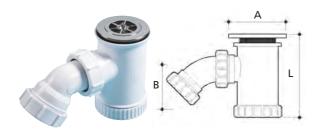

	Size (mm)	Α	В		Colour	Code
SHOV	WER TRAP W	ITH 45° <i>A</i>	DJUSTAB	BLE WASTE	- 50mm water s	eal, 70mm grid
\$	40	88	64	129	W	484.15
\$	40	88	64	129	C/P	486.15

400 System

Terrain Traps System - WC Pan Connectors 490

		Size (mm)		Z1	Z2	Colour	Code				
	STRAIGHT WC CONNECTOR FIN SEAL										
_	\$	110	127	30	114	W	499P.4.00				

	Size (mm)	Angle°		Z1	Z2	Colour	Code		
90° WC CONNECTOR FIN SEAL BEND									
\\$	110	90	118	116	250	W	499P.4.90		


	Size (mm)	Angle°	Z1	Z2	Colour	Code				
14° WC CONNECTOR FIN SEAL SPIGOTS										
\$	110	14	15	81	W	499P.4.104				

	Size (mm)	L	Z1	Z2	Colour	Code				
40MM OFFSET WC CONNECTOR FIN SEAL										
\$	110	131	33	40	W	494P1.4.00				
12MM OFFSET WC CONNECTOR FIN SEAL										
\\$	110	117	11	12	W	494P2.4.00				


	Size (mm)	Angle°				Colour	Code				
SW	SWIVEL CONNECTOR 0-30° FIN SEAL										
\$	110	0-30	118	45	114	W	498P.4.030				

	Size (mm)	Angle°	L	Z1	Z2	Colour	Code		
SWAN NECK WC CONNECTOR 90° FIN SEAL									
\$	110	90	175	16	139	W	496P.4.90		


















Terrain Traps & Pan Connectors

Terrain Traps System - WC Pan Connectors 490

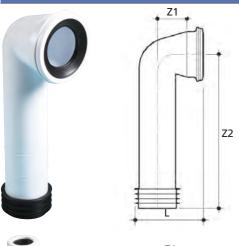

	Size (mm)	Angle°	L	Z1	Z2	Colour	Code		
LONG 90° WC CONNECTOR FIN SEAL - 225mm leg									
\$	110	90	172	74	390	W	491P.4.90		

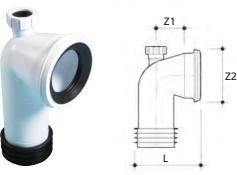


	Size (mm)	Angle°		Z1	Z2	Colour	Code		
90° WC CONNECTOR WITH BOSS FIN SEAL									
\$	110	90	171	73	138	W	495P.4.90		



	Size (mm)		Z1	Z2	Colour	Code				
EXTENSION 200MM										
\$	110	250	54	114	W	493P.00				



Size (mm)	Angle°	Z 1	Z2	Colour	Code				
WC MANIFOLD CONNECTORS FIN SEAL SPIGOT - when used in conjunction with a branch 104, up to seven WC pans can be connected either side of the soil stack									
110	5	14	58	W	499.4.05				
110	14	19	58	W	499.4.14				
110	24	24	58	W	499.4.24				
110	34	26	70	W	499.4.34				

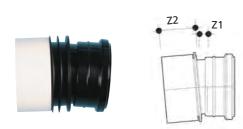


Size (mm)	Angle°	Z1	Z2	Colour	Code
WC FRAME MAN	NIFOLD BEN	ND CONI	NECTORS I	FIN SEAL SPIG	ОТ
110	5	7	65	В	497.35.05
110	14	11	65	В	497.35.14
110	24	14	70	В	497.35.24
110	34	18	77	В	497.35.34
110	9	9	63	В	F497.35.09
110	18	11	67	В	F497.35.18
110	29	18	77	В	F497.35.29

400 System


Terrain Traps System - WC Pan Connectors 490

Size (mm)	Angle	L	Z1	Z2	Colour	Code
WC CONNECTO	R 90° SP	IGOT 0	UTLET	- for conn	ection of WC par	ns to existing soil or
waste pipework pre	viously con	nected t	o traditio	onal 'S' mo	ode pan	
110	90	150	63	240	W	499.4.90

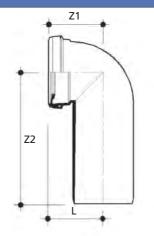






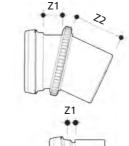













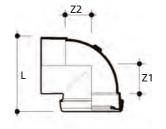

Z2


Z2



	Size (mm)	Angle°		Z1	Z2	Colour	Code
	NC TURNED ans to soil pipes		CTOR S	SOCKET	OUTLE	T - for connecting	g non BS 5503
\\$	110	90	208	72	106	W	492.4.5

Z1 🙎	
-	








Terrain Waste System

500 Overflow System - for Cold, Non-Pressure Water. Sockets are for Solvent-Weld Jointing

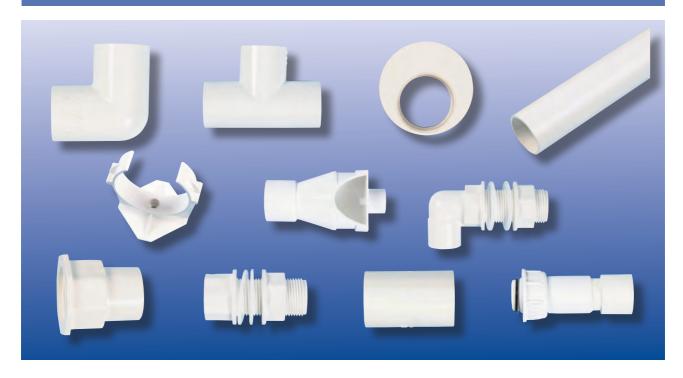

Solvent-weld PVC-u system for cold, non-pressure water:

- 19mm PVC-u pipe and fittings
- Range of tank connectors


<u> </u>	Α ,	A		
T 1				-
Fig. 6			В	

19mm pipe and	fittings (Fig.5)		
Α	В	T1 (min)	T1 (max)
21	19	1.1	2.0


500 Overflow

Terrain Waste System - 500 Overflow


Size	Size (mm) L		T (min)	T (min) Colour	
OVERFLO	W PIPE -	plain-ended			
	19	4m	1.1	W	500.75.40

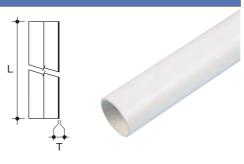


Size (mm)	L	Z	Colour	Code			
STRAIGHT COUPLER DOUBLE SOCKET							
19	40	2	W	510.125			



Size (mm)	Angle°	Z1	Z2	Colour	Code		
BEND DOUBLE SOCKET - 91¼° and 135° as standard							
19	911/4	12	12	W	501.75.91		
19	135	6	6	W	501.75.135		




Size (mm)	Angle°	Z1	Z2	Z3	Colour	Code
BRANCH - 911/4°	as standard	d				
19	911/4	13	13	13	W	504.75.91






Size (mm)	Α	Z	Colour	Code
SOCKET REDUCER				
19/32	5	5	W	524.75



Size (mm)	А	Colour	Code			
PIPE FIXING CLIP (PLASTIC)						
19/32	20	W	540.75			






Terrain Waste System


Terrain Waste System - 500 Overflow





Size (mm)	А	L	Colour	Code	
STRAIGHT TANK CONNECTOR - to connect cistern/tank to overflow pipe					
19	48	69	W	511.75	






Size (mm)	Angle°	A	Z1	Z2	Colour	Code
BENT TANK CONNECTOR 90°						
19	90	48	13	32	W	502.75.90


Solvent-weld socket to receive overflow pipe. Threaded socket to receive 3/4"BSP male threaded pipe end.





Size (mm)	A		Colour	Code		
BSP ADAPTOR SOLVENT-WELD SOCKET AND 3/4"BSP SOCKET - to connect PVC-u overflow pipe to threaded components						
19	14	39	W	512.75		



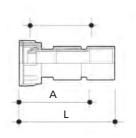

Size (mm)	Α		Z1	Colour	Code
REVERSE	REVERSE NUT CONNECTOR - to connect PVC-u overflow pipe to threaded components					
19	9	35	54	25	W	519.75

Threaded loose nut to receive 3/4" BSP male threaded pipe end.





Size (mm)	L	Colour	Code
TUNDISH			
19	117	W	590.75

Accessories/Ancillaries

Accessories/Ancillaries

Size (mm)	Colour	Code
WC PAN SEAL (SOIL) - replacement seal for pan of Material: EPDM	outlet diameter 95¼	- 121mm.
110	В	9124

Note: Use with 495.45 / 492.45

Size (mm)	For Fittings	Colour	Code
	NGS (SOIL) - suitable for soil systen tors to Cast Iron. Soil fittings as listed		ts and soil pipe,
110	Push-Fit Soil (P) range	В	9116.4
160	Push-Fit Soil (P) range	В	9116.6
82	109/111/111.S/126/132	В	9120
110	103/105/109/111/111.S/126/132/137	В	9119.B



Size (mm)	Colour	Code				
SPARE SEAL RINGS (SOIL) - allows soil fittings to accept metric copper pipe to BS 2871. Material: EPDM						
110	Red	9149				

Size (mm)	Colour	Code
SPARE SEAL RING (WASTE) - 200 Waste S BS 5255 and BS 5254, acceptable for copper pip		ipe manufactured to
32	В	9132.125
40	В	9132.15
50	В	9132.2

Note: Use with 226.2



Size (mm)	Colour	Code
MANIFOLD SEALING INSERT - Material: EPDM		
40	В	9113

Note: Use with 119.4.115



Size (mm)	Colour	Code
MANIFOLD PLUG (SPARE) - Material: Polypropylene		
40	G	9114

Note: Use with 119.4.115



Terrain Waste System

Accessories/Ancillaries



	Size (ml)		Colour	Code			
TERRAIN ACCESSORIES - LIQUID WELD - for solvent jointing of PVC-u pipes and fittings cap, incorporates integral brush							
\$	250	Tub	S/Steel	9100.250SW			
\$	500	Tub	S/Steel	9100.500SW			

TERRAIN Soluble Lubricant	

Size (ml)		Colour	Code
TERRAIN ACCESSOI	RIES - LUBRICANT - for I	ubricating seal rings on e	expansion fittings
250	Tub (silicone)		9136.250L
500	Tub (Soluble)		9136.500L



Material: Silicone grease or Soluble lubricant.

Size (ml)		Colour	Code		
TERRAIN ACCESSORIES - CLEANING FLUID - for cleaning PVC-u pipe and fittings before applying Liquid Weld					
250	Tub		9101.250CF		

Material: Acetone. Screw top cans.



Size (ml)		Colour	Code
INTUMESCENT P	PIPE COLLAR		
55	To be used with 50mm pipe	Red	1625.55R
82		Red	1625.82R
110		Red	1625.110R
160		Red	1625.160R
200		Red	1625.200R
250		Red	1625.250R




	Colour	Code
TOGGLE BOLT - to clamp 112 and 115 Boss Connectors	while solvent-	welding
	Self	9115


Size (mm)	Colour	Code	
PACKING PIECE - for use with 140 and 1	42 Pipe Brackets and 191 Interme	ediate Support Brackets	
82	G	9104.3	
110	GB	9104.4	
160	G	9104.6	

Size (mm)	Colour	Code			
HOLE MARKING TEMPLATE - to clamp 112 and 115 Boss Connectors while solvent-welding					
110	Blue	9105.500			


Terrain Pleura System

Alternative Ventilation System










Global Connector

Size (mm)	Α	В	С	D	Е	F	G	Н	- 1	Colour	Code
TERRAIN PLEURA 100											
	195	141	50	83	89	111	50	75	106	W	9301.34





Size (mm)	Α	В	C	D	E	F		Н	-1	Colour	Code
TERRAIN P	.A.P.	A. - F	ostitve	Air P	ressur	e Atter	nuator				
	200	652	104	83	89	111	50	75	106	W	9300.4

NOTE: Please request design advice prior to using these products. P.A.P.A must be used in conjuction with Terrain Pleura valves.





Refer to Terrain Pleura System brochure for further details

Terrain Fire Trap

Terrain Firetrap Sleeves

- Compatible with all Terrain systems.
- Comprehensively tested to BS EN 1366-3, BS 476P+20.
- Suitable for vertical and horizontal fire compartmentalisation.
- Quick and easy to install.
- For new installations and retrofit.

Pipe size **Product Code** Ø suitable for 56mm 1925.60 60mm 110mm 50mm PVC 1925.89 89mm 139mm 82mm 1925.114 114mm 164mm 110mm 1925.169 169mm 219mm 160mm



Terrain Firetrap Collars - for Terrain PVC Soil and Waste

- Seals against smoke, toxic gases, flames and heat
- Can be surface mounted or built in
- Intumescent material is totally unaffected by water, is robust, 'non-flaking' and difficult to tear
- Powder coated steel outer casing

See Terrain Firetrap brochure for further details.

Product Code	Ø	Fire Rating
1625.55R	50mm	2 Hour
1625.82R	82mm	2 Hour
1625.110R	110mm	2 Hour
1625.160R	160mm	2 Hour
1625.200R	200mm	2 Hour
1625.250R	250mm	2 Hour



General Principles

Good Site Practice

- Take all reasonable care when handling PVC-u particularly in very cold conditions when the impact strength of the material is reduced.
- Do not throw or drop pipes, or drag them along hard surfaces.
- In case of mechanical handling, use protective slings and padded supports. Metal chains and hooks should not make contact with the pipe.

On-site storage

- Stack pipe lengths
 - either on a flat base
 - or on level ground
 - or on 75mm x 75mm timber at 1 meter centres (Fig. 1)
- Provide side support with 75mm wide battens at 1m centres (Fig. 1).
- Maximum stack (normal conditions): seven layers high.
- Ideally, stacks should contain one diameter pipe size only. Where this is not possible, stack largest diameter pipes at base of stack. Small pipes may be nested inside larger pipes.
- If stored in the open for long periods or exposed to strong sunlight, cover the stack with opaque sheeting.

- Store fittings under cover. Do not remove from cartons or packaging until required.
- Store solvent cement and cleaning fluid in a cool place out of direct sunlight and away from any heat source.

Storage in hot climates

- Ultra-violet light can affect pipes and fittings: pipe colour may change and rubber seals may be degraded.
- Accordingly:
 - store all materials in well-ventilated, shady conditions
 - do NOT expose to direct sunlight
 - keep fittings in original packaging until required for use
- Maximum stack (hot conditions): six layers high.

Site safety

- The relevant regulations detailed in the Health & Safety at Work Act 1974, and Construction (Design & Management) Regulations 1995, must be adhered to on site.
- COSHH data sheets are available on request.

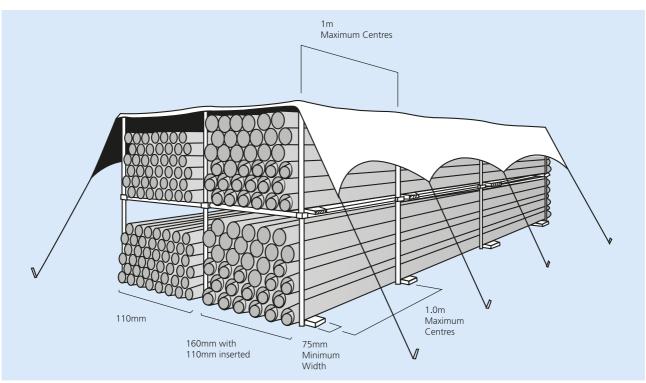


Fig. 1 Pipe stacking

Sitework Instructions

Solvent cement jointing

This technique applies to 100, 200, 400 and 500 pipes when used with 100, 200 and 500 system fittings.

Step 1

Cut pipe square, deburr and clean mating surfaces with Terrain cleaning fluid 9101 (Fig.1).

Step 2

Coat mating surfaces with solvent cement using a clean brush, assemble joint immediately, removing any excess cement with a clean rag. Initial set 3-minutes. Note 24 hours is required for the joint to fully set before testing. (Fig. 2).

Brush supplied with tin is suitable only for sizes up to 50mm for larger sizes use at least 12mm brush. Directions for use of solvent cement are printed on the container label and must be followed closely.



Under normal use only fit 109 to upstream socket.

Step 1

Clean mating surfaces with Terrain cleaning fluid 9101 (Fig.3).

Step 2

Fit seal ring into 109 collar (Fig. 4)

Step 3

Carefully apply solvent cement to mating surfaces (Fig. 5)

Step 4

Assemble immediately applying firm even pressure until collar is in correct position (Fig. 6)







Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6

Estimating guide: Terrain cleaning fluid, liquid weld, lubricants

Contents			pe sizes & number	es & number of joints achievable*			
		32mm	40mm	50mm	82mm	110mm	160mm
9101 Cleaning Fluid	125ml	80	80	80	30	20	10
_	250ml	160	160	160	60	40	20
9100 Liquid Weld solvent cement	125ml	27	27	27	10	7	3
_	250ml	55	55	55	20	15	7
9136 Lubricant	250gm	400	300	250	200	150	100

^{*} For guidance only: approximate number allowing for wastage.

Seal ring jointing - 109

Step 1

File a 45° chamfer onto end of square cut pipe. Lubricate rubber seal with Terrain lubricant 9136 (Fig.7).

Step 2

Enter pipe fully into socket, mark pipe as shown (Fig. 8).

Step 3

Withdraw pipe until the mark is 12mm away from socket. This means a 12mm gap exists between the end of the pipe and the socket register. This gap will allow the pipe to expand without distorting the pipework. Anchor the expansion joint with a holderbat or if not practical anchor a fitting within 1 metre of the joint (Fig 9 & 10).



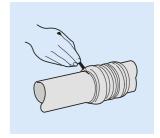
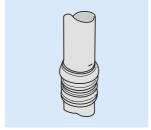


Fig. 7

Fig. 8



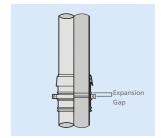


Fig. 9

Fig. 10

Slip coupling - 111.S

Slip couplings are used for inserting additional fittings such as branch or for remedial work in existing soil pipework. To insert fitting:

Step 1

Assemble the fitting with a short length of pipe in the appropriate sockets. Cut out a section of the assembly, allowing for an expansion gap. Clean and chamfer pipe ends. Lubricate seals of the slip couplings.

Step 2

Slide the couplings completely over the spigot ends of the existing pipe.

Step 3

Insert and line up the new assembly, slide back the couplings to cover over the joints. Secure slip couplings with holderbats. (See Fig. 11).

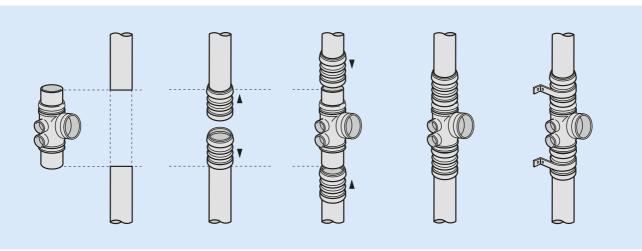


Fig. 11

Control of Thermal Movement - Expansion and Contraction

Support and expansion

Plastic pipes expand and contract with changes in temperature. It is therefore essential that expansion joints be provided for the relief of such thermal movement. Any point where a pipe is made good, or fire stopped when passing through a floor or wall, must be treated as a fixed point when arranging the position of expansion joints, but should not be relied on to anchor the pipe unless the socket of a fitting is firmly concreted in. An expansion joint must be fitted between any two fixed points one metre or more apart.

(See Fig. 12) Vertical stacks are generally suported by holderbats anchoring expansion joints. Intermediate holderbats are necessary to steady the pipes.


More frequent support is required in horizontal runs. Maximum distances between expansion joints and holderbats are given in the tables below

Support and Expansion Distances


Unless there is an alternative provision for thermal movement, pipework should be fitted with expansion joints in the following locations:


	Maximum Distance between expansion joint
Pipe Size - Soil	
82mm	4m
110mm	4m
160mm	4m
Pipe Size - Waste	
32mm	2m
40mm	2m
50mm	2m

a) At spacing's no greater than 4m for pipework 82mm and above.



- c) Where the maximum distance between fixed points exceeds 1m
- d) Any point where pipework passes through a floor or wall and is made good or fire stopped must be treated as a fixed point when determining positions of expansion joints.
- e) Low level WC manifolds incorporate ring seal adaptors at each branch connection to compensate for expansion and also allow the branch to be 'turned' to the correct angle to allow connection to the WC

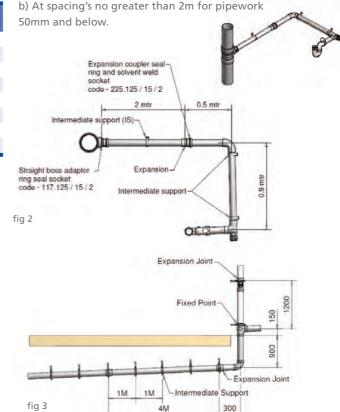

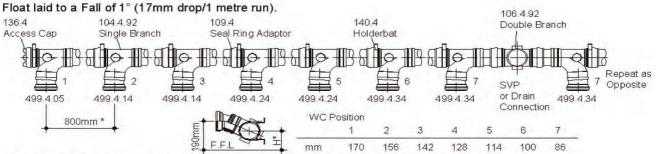

^{*} For centres less or greater than 800mm see overleaf or contact our Technical department on Maidstone (01622) 795200

Expansion Joints

Pipe brackets must be used to anchor expansion joints. The anchor point can be made directly in the bracket grooves provided on pipework fittings or alternatively directly onto the pipe.

When anchoring the pipework using a solvent weld fitting a ring seal adaptor (code 109) needs to be solvent welded to the fitting to accommodate expansion. It is important to lubricate the ring seal adaptor with silicone grease (9136.250)



The pipe connecting into the ring seal adaptor should be inserted fully into the socket and marked. To create the expansion gap withdraw the pipe 12mm from the socket. This gap will allow the pipe to expand sufficiently without distorting the pipework. (figs 6,7&8)

Anchor points directly onto the pipe can be made using a solvent welded piece (code 9104). The anchor point must be within one metre of the proposed point of anchorage.

Note: On internal pipework systems subject to fire requirements it is recommended that only steel support brackets (code 140) are installed. Intermediate support must also be provided.

Pipework supports shall be provided in accordance with the following tables and either side of bends.



Multiple pipe supports for pipes of differing sizes shall be spaced at intervals required for the smallest pipe.

The Thermal Movement Limiter (TML - code 190) prevents the pipe from pulling out of the ring seal adaptor and causing a flood. It will also be necessary to install intermediate support bracket (code 191).

Pipe Material	Pipe SIZE (MM)	Vetical Pipes (m)	Low Gradient Pipes
MuPVC	32-40	1.2	0.5
	50	1.2	0.9

Pipe Material	Pipe SIZE (MM)	Vetical Pipes (m)	Low Gradient Pipes
PVC-u	32-40	1.2	0.5
	50	1.2	0.9
	75-100	2.0	1.0
	150	2.0	1.0

Multiple pipe supports for pipes of differing sizes shall be spaced at intervals required for the smallest pipe.


The Thermal Movement Limiter (TML - code 190) prevents the pipe from pulling out of the ring seal adaptor and causing a flood. It will also be necessary to install intermediate support bracket (code 191).

Alternative Provision for Thermal Movement

Expansion joints may be omitted if alternative provision is created in one of the following ways.

a) Above the highest branch connection to a foul and/or waste stack is free to move through a weather proof roof sleeve. (fig 13)

b) At the base of an external drainage stack that is connected to a drainage connection that allows movement through an EPDM sleeve. (fig 14)

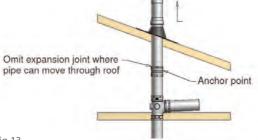

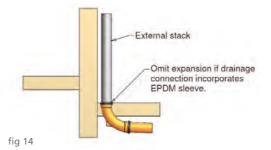


fig 13

Sitework Instructions

Steel holderbat 140

These are designed to clamp fittings, creating a fixed point and to control thermal movement of pipework.

To use holderbats for fittings the strap must fit snugly around the fitting. locate tongue in front of square hole and position strap to suit curvature of fitting. Insert bolt in circular hole and tighten nut (Fig. 14).

For pipe, locate tongue in back square hole and bolt in circular hole and tighten nut. The pipe must be free to move through the holderbat to allow expansion and contraction (Fig. 15). (Alternatively a packing piece 9104 can be used for pipe with the tongue located in the front square hole, as for fittings (Fig. 16).

Plastic holderbat 143

This is designed to perform the same two functions as the steel holderbats, i.e. to support pipework and allow thermal movement. When clampled around the socket of a fitting it creates a fixed point (Fig. 17).

Adjustable holderbat 144

This is designed to perform the same functions as the other holderbats except it provides up to 28mm of adjustment on the 110mm system. When clamped around the socket of a fitting it creates a fixed point. When used to support pipe it is necessary to locate strap onto inside of back plate (Fig. 18).

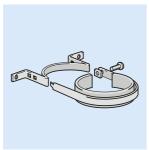


Fig. 13



Fig. 14



Fig. 15



Fig. 16

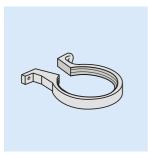


Fig. 17



Fig. 17(1)



Fig. 17(2)

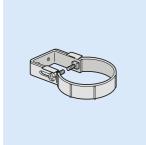


Fig. 18



Fig. 18(1)



Fig. 18(2)

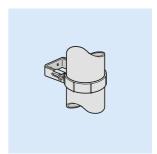


Fig. 18(3)

Boss pipes 120 & 123

Only top socket can be converted to seal ring using seal ring adaptor 109.

Lugs permit holderbat anchorage.

120.4 - Accepts 200.125 and 200.15 pipe. (Fig. 22).

Sockets can be converted for expansion using a seal ring adaptor 109.

120.3.2 - Accepts 200.2 pipe and is suplied with blanking plugs that can have the centres removed to accept 200.15. (Fig. 23).

Must be used with engraved arrow pointing downstream to accommodate built in fall of 1½°.

123.4 - Must be used with branch boss adaptors 117 or 117.90. Waste pipe then connects into fitting. (Fig.24)



Only the top socket can be converted to seal ring using seal ring adaptor 109.

This boss pipe is for use with bends 207.15.150 allowing the waste pipe to approach at clip distance without the use of offsets. It can be used in both flat (Fig. 26) and corner (Fig.27) situations where pipes approach at 180° and 90° respectively. Solvent weld blanking plug into unused socket.

All bosses will accept 1½" waste pipe, solvent welded direct into the boss pipe.

For 1¼" connection a socket reducer 224.15.125 is required. Then use 207.125.150.

NOTE: The letters A, B, and C will be found engraved above each socket on the fitting.






Fig. 22



Fig. 22

Fig. 24



Fig. 25

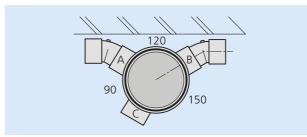


Fig. 26



Fig. 27

System Connections

Connection via universal manifold

Applicable to:

119P Universal Soil Manifold (Fig. 79). 119 (solvent connections) and 119P (Push-Fit connections) For 32mm and 40mm waste connection

- For up to four connections of BS EN 1566/ BS EN 1451-1 waste pipe at floor level (e.g. in bathroom) without need for adaptors.
- May be positioned neatly in corner of room for connection to internal soil stack.
- Supplied with four inlets and with removeable plugs.
- A sealing gasket is supplied for each inlet (Push-Fit only). Install as follows:
 - Mark selected position the manifold will occupy on the floor and cut out shape.
 - Push-Fit soil connections to top socket, spigot connection to bottom socket.
 - Remove plug (if present) from selected waste inlet(s).
 - Push-Fit as necessary waste pipe into the manifold until the stop is reached.
 - Check that any waste inlet which is not required has plug in place.

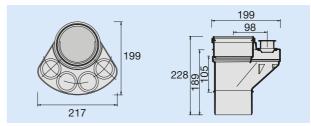
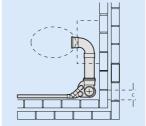


Fig. 79 419.4.15 Universal soil manifold








Fig. 80 Internal soil stack connection

Variable boss branch

- Slacken locking ring (Fig. 28).
- Rotate lower unit so that waste connections are in required position (Fig. 29).
- Tighten locking ring (Fig. 30).
- If at ground floor use spigot version push into buried drain lipseal (Fig. 31).
- If at first floor and above use socket version and solvent weld to stack (Fig. 31).
- If only one waste connection is required solvent weld blanking plug into unused socket (Fig.32).
- If 1½" connections are required cut off socket plug at cut guide and use as a reducer (Fig.33).





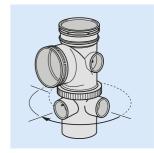


Fig. 29



Fig. 30



Fig. 31

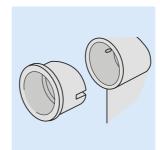


Fig. 32



Fig. 33

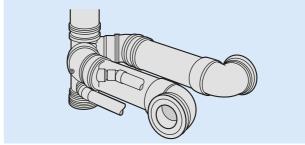


Fig. 34

Sitework Instructions

Boss adaptors

These accept pipe via a boss ring adaptor, 117 straight or bent.

- Cut out centre of boss. For correct size hole cutter refer to (Fig. 35).
- Remove swarf and clean mating surfaces with Terrain cleaner 9101 (Fig. 36).
- Apply solvent cement 9100 to all mating surfaces (Fig. 37).
- Position boss adaptor, twist to ensure contact then hold under pressure for a few moments (Fig. 38).
- Remove excess cement (Fig. 39).



- Cut correct hole size and deburr (Fig. 40).
 For correct size hole cutter refer to table below.
- Remove swarf and clean mating surfaces with Terrain cleaner 9101 (Fig. 41).
- Apply solvent cement 9100 to all mating surfaces (Fig. 42).
- Pass inner component outward through hole from the inside of the pipe and push the outer component firmly on to it ensuring that the key and keyway are lined up. Ensure engraving reads: top 91¼ for waste top 88¾ for vent (Fig. 43).
- Insert toggle bolt and screw up until boss is fully closed with flanges in contact with the pipe both inside and outside. (Fig. 44).

NOTE: Leave toggle bolt in position for approximately 15 minutes.

Hole saw sizes			
Aperture diameter (mm)	To suit fitting ref.		
33	281.43		
48	112.4.125 - 135.3 - 112P.4.125		
51	117* - 112P.4.15		
57	112.X.15 - 115P.4		
60	122.4.125 - 112P.4.2		
64	122.4.15		
70	112.X.2		
73	135.4 - 135.6		
75	122.4.2		









Fig. 36

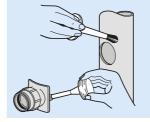


Fig. 37



Fig. 38



Fig. 39

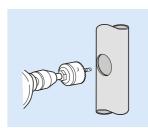


Fig. 40





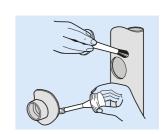


Fig. 42




Fig. 43

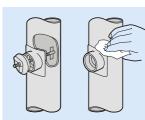


Fig. 44

Self locking boss 122

- Cut correct hole size and deburr. For correct size hole cutter refer to table on page 59 (Fig. 45).
- Slacken nut on boss to full extent. Enter boss into hole keeping the keyway to the last piece to enter the hole. Tighten outer locking nut (Fig. 46).
- Once satisfied that the boss fits neatly into the pipe remove and clean all mating surfaces with Terrain cleaner 9101 (Fig. 47).
- Apply solvent cement 9100 to all mating surfaces (Fig. 48).
- Re-enter boss into the pipe. Screw up until hand tight and remove excess cement (Fig. 49).
- Template available ref: 9105.500.



9105.500

Access door 135 (110mm & 160mm)

- Set out centre lines as described on inside of access door. Check aperture will be parallel with axis of pipe (Fig. 50).
- Drill two overlapping holes of correct size at 45mm centres (Fig. 51).
- Remove sides of aperture using a medium file (Fig. 52).
- Slacken door to its fullest extent. Push the inner part of the door into the hole at a slight angle turning at the same time. When it is fully entered, turn it parallel to the axix of the pipe ensuring that the inner part locates into the hole. (Fig. 53).
- Ensure seal ring is lubricated prior to fitting.
 Tighten the screw whilst pulling the door outwards.
 Do not over tighten (Fig. 54)

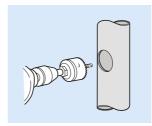


Fig. 45

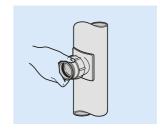


Fig. 46



Fig. 47

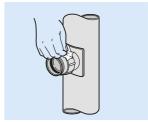


Fig. 48



Fig. 49

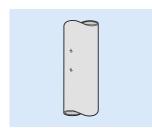


Fig. 50

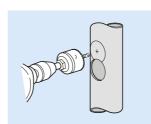


Fig. 51

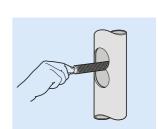


Fig. 52




Fig. 53




Fig. 54

Sitework Instructions

Weathering slates for pitched roofs 149

- Place 150 Vent Cowl on open end of soil stack (do NOT solvent-weld at this stage) (Fig. 55).
- Slide 149 Weathering Slate over stack (Fig. 56).
- Dress the base plate to fit the lower tiles. Lay the side and upper tiles over the base plate (Fig. 57).
- Remove the vent cowl. Solvent-weld 131 Weathering Apron to pipe above rubber cone to prevent water ingress. Place 150 Vent Cowl onto stack and solventweld into position (Fig. 58).


NOTE: On low pitched roofs, optimum weathering may be achieved by making a single weld to the lower edge of the base plate.

In areas subject to high winds, or in difficult tiling situations, use tingles to prevent lower edge lifting away from tiles.

If installing on roof with interlocking tiles, boards or additional battens may be required underneath the weathering slate. The stack must pass through only ONE course (if necessary, the soil stack should be offset beneath the roof).



- Dress first layer of felt up to pipe (Fig. 59)
- Place 150 Vent Cowl on open end of soil stack (do NOT solvent-weld at this stage). Slide 149 Weathering Slate over stack. Push slate (and its rubber cone) down onto first layer of felt (Fig. 60)
- Coat the aluminium baseplate with bitumen. CAUTION: Keep hot material away from rubber cone Place second layer of felt over baseplate up to the cone. Trim accordingly. Repeat for third layer of felt (Fig. 61).
- Solvent weld weathering apron 131 for asphalt to pipe above cone to prevent ingress of water. Replace vent cowl (Fig. 62).





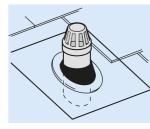

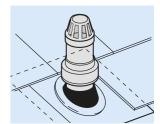


Fig. 56







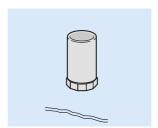
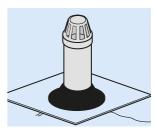


Fig. 59



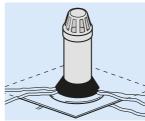





Fig. 48: Vent cowl 150 Weathering apron 131.3.200

Weathering to pitched roofs using purpose made slate e.g. lead

- Position purpose-made weathering slate on open end of soil stack (Fig. 63).
- Slide 131 Weathering Apron over stack and solventweld in position. Replace vent cowl and solvent-weld into position (Fig. 64).

Weathering to asphalt roofs using purpose made slate e.g. lead

- Position purpose-made weathering slate on open end of soil stack. Lay asphalt as normal, over baseplate and to upper rim of lead upstand around pipe. Feather this edge of the asphalt (Fig. 65).
- Slide 131 Weathering Apron over stack and solventweld in position. Place 150 Vent Cowl onto stack and solvent-weld into position (Fig. 66).

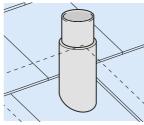




Fig. 64: Vent cowl 150 Weathering apron 131.3.200 or 131.4.200

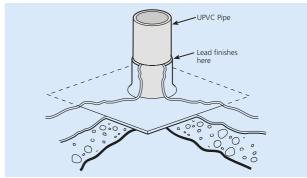


Fig. 65

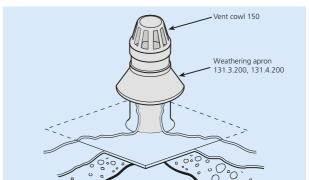


Fig. 66

System Connections

System Planning

System connections to below ground drainage

Connecting to soil system (soil pipe to BS EN 1329)

- 110mm Soil Pipe to 110mm Underground Pipe
 110mm Underground Pipe may be connected directly to 110mm Soil Pipe (Fig. 25)
- A 45° external chamfer should be filed onto the end of square cut soil pipe. The soil pipe is then push-fit into the underground drain ring seal socket, using
 9136 Lubricant
- 82mm Soil Pipe to 110mm Underground Pipe (Fig. 26)
 Connection should be made using the 4DW3 Socket

 Reducer. The socket reducer is inserted into the plain end of the underground pipe. The 82mm soil pipe is then pushed into top of reducer

Connecting to waste system (waste pipe to BS EN 1566)

Connection is made using the **124 Socket Reducer**. The socket reducer is pushed into the ring seal of the socket on the underground drain pipe. The waste pipe is solvent-welded into reducer. Additional reducers may be used as required.

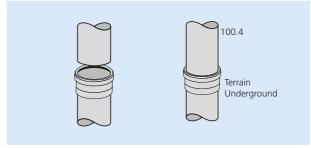


Fig. 25

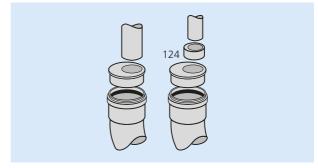


Fig. 26

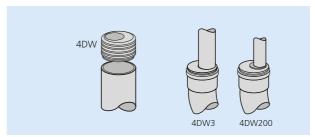


Fig. 27

Connecting to BS EN 5255/1566 waste pipe (Fig. 28) (also to copper waste pipe)

The centre of 130 Socket Plug should be drilled out, ready for solvent-weld connection of the appropriate size 4DW Boss Adaptor. Seal rings on 4DW and underground drain socket should be lubricated using 9136 Lubricant. The socket plug is then inserted into the underground drain socket and 200 Waste Pipe (or copper waste pipe) into 4DW adaptor.

Waste	
32mm round	
40mm round	4DW200
50mm round	

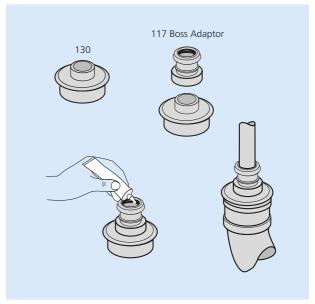


Fig. 28


Automatic air admittance valves 153.3, 153.4 & 253.2


Installation

The valve should be fitted vertically and should normally be positioned in the roof space, but if fitted to a WC float or waste branch, must always be positioned above the spill-over level of appliances.



Fig. 67

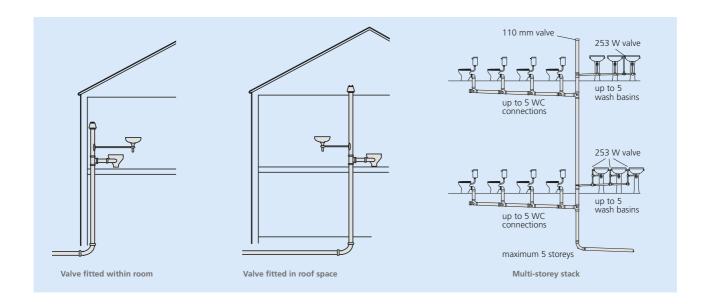

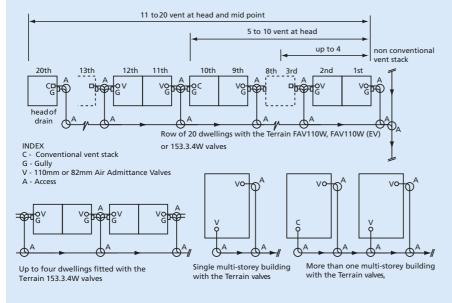

Houses B,C and D may have automatic air admittance valve but house A must have normal S.V.P. to vent head of drain

A typical row of dwellings connected to a common drain, with automatic air admittance valves fitted to soil and vent stacks.

NOTE: providing that the head of drain (house A) is open vented, i.e. with S.V.P. then up to 9 houses downstream may be fitted with automatic air admittance valves.

System Connections


Multiple connection of BS 5503 WC pansApplicable to: 499 WC manifold connectors

Connections to float laid to 1° fall of float (17mm drop per 1 metre run).

• For minimum dimensions solvent-weld 50mm pipe length into branch socket to provide sleeve.

NOTE: To extend distance between WC connector and branch, a longer length of pipe may be used.


- Position and fix branch to wall.
- Fit finned rubber seal onto spigot of connector.
- Push spigot of connector into sleeved branch socket (DO NOT LUBRICATE).
- Lubricate rubber seal with 9136 Lubricant to accept WC spigot.
- Align connector socket so that it is square with WC spigot (finned seal allows up to 5° adjustment).

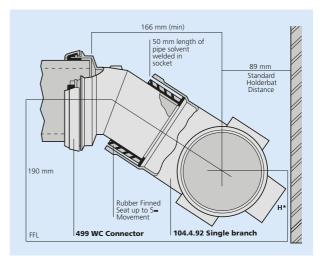

Manifold connector connected to 104 branch

Alternatively float construction can be achieved using 498.4.02.


For centres less or greater than 800mm contact Technical Department.

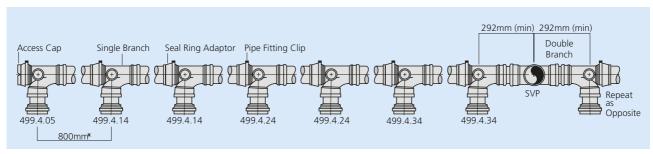

Multiple WC pan connections layout

Distance from finished floor level (FFL) to centre of float						
Connector Type	H* mm (min)	H* mm (max)				
499.4.05	166	176				
499.4.14	142	162				
499.4.24	114	132				
499.4.34	80	100				

^{*} Variation achieved by flexing rubber finned seal joint.

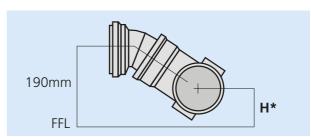

Distance from finished floor level (FFL) to centre of float


Connecting to other materials

Connecting to iron, clay or cement fibre spigot

Applicable to: 126 and 226 Adaptors. For soil and waste connections, use with:

9120 Seal Ring for 82mm 9119 Seal Ring for 110mm 9119B Seal Ring for 110mm

- Place rubber seal ring over spigot to half depth of socket (Fig.68).
- Position adaptor centrally
 Fig. 68 over joint:
 - 126.3.12 Adaptor (for 82mm soil pipe)
 - 126.4.12 Adaptor (for 110mm soil pipe)
 - 226.2 Adaptor (for waste pipe)
- Heat gently with a gas torch/hot air gun, all round the socket starting at the base of the socket and working upwards (Fig. 69).
- When the socket has shrunk down to the adjoining spigot, and the captured seal ring has created a raised ridge, stop applying heat (Fig. 70).
- Leave to cool before moving or applying any pressure.






Fig. 69


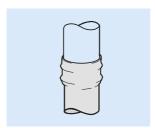


Fig. 70

Connecting to copper

- Clean pipe with 9101 Cleaning Fluid (Fig. 71).
- Replace black seal ring in PVC-u socket with appropriate red seal ring:
 - Seal ring ref. 9149 for 108mm metric copper to BS 2871

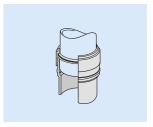

- Seal ring ref. 9145 for 4" imperial copper to BS 659
- Lubricate seal ring with 9136 Lubricant and and insert copper spigot as for standard PVC/PVC seal ring joint (see page 50).

Connecting to lead

- Clean pipe with 9101 Cleaning Fluid (Fig. 72).
- Wipe or lead weld short length of copper tube onto end of lead pipe.
- Follow procedure as for copper.


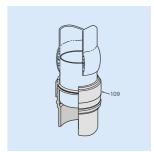


Fig. 72

System Connections

Connecting to other materials

Connecting PVC to HDPE

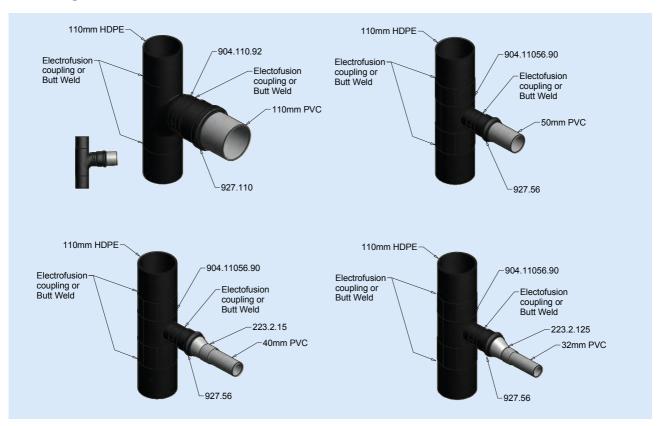


Trapped floor gullies

Installing trapped floor gullies

Applicable to:

279/281 Trapped Floor Gully, and 282 and 283 Floor Gully

- Check overall height of unit with inlet in position, and adjust to suit installation location. (Do NOT solvent weld inlet at this stage) (Fig. 74/75).
- Place gully into position.
- Solvent-weld waste pipe to outlet socket.
- Bring floor screed up to level with bottom of gully inlet.
- Allow screed to set, and remove gully inlet.
- Apply waterproof mastic to underside of square flange of gully inlet.
- Solvent cement gully inlet into position.
- Tile up to inlet, and grout using waterproof grout.





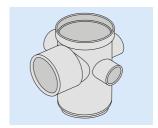


Fig. 75



Fig. 76




Fig. 77

Connecting waste to soil pipework

Back to back WC connections

Back-to-back WC's must NEVER be connected using a double branch laid horizontally because cross flow WILL occur .

EITHER

- Run two separate horizontal floats using a corner branch.
 OR
- Stagger connections on a single float.

Using: 106.490.12, 106.490.22 Corner boss branches

 Use as Fig. 34 (page 55) with 135° bends. Can connect single or a range of WC's on each 110mm branch Lower bosses can connect two 50mm waste pipes directly to sockets or 40 and 32mm pipes using appropriate reducers.

Using standard single branches and 499 WC manifold connectors

See page 61 for details on angles.

- Alternatively, use staggered layout, as shown in Fig. 78.
- Use standard boss connection methods.

Minimum distance between WC spigots 445 mm 130 min 149 min 166 min 104.4.92 107.4.135 107.4.135 107.4.135 109.4 104.4.327 109.4 104.4.327 109.4 104.4.327 109.4 104.4.327 109.4 104.4.327 109.4 104.4.327

Fig. 78

Making offsets

Offsets on-site

Requirement: To offset soil pipe run

- Created on site with a length of 100 soil pipe and 101, 101P, 107 & 107P bends.
- Measure projection required.
- Determine length of pipe required
- Square-cut pipe length and de-burr cut ends. For ring-seal joints, pipe ends must be chamfered.
- Solvent-weld or Push-Fit into standard bend or offset bend sockets

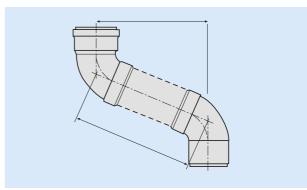


Fig. 82 Offset pipe

Balcony Outlets

Balcony Outlets

Installing screed finish balcony outlet

Applicable to: 2172 Balcony Outlet

- Remove grid
- Position spacer on locating pegs
- Replace screws temporarily to prevent ingress of concrete
- Lay screed to the level of the top edge of the spacer
- Remove screws and replace grid
- Dress flashing over the rear upstand
- Tuck flashing into brickwork, joint and point

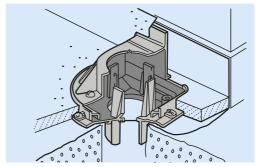


Fig.27

Installing asphalt finish balcony outlet

Applicable to: 2174 Balcony Outlet

- Remove grid
- Temporarily replace screws to prevent ingress of asphalt
- Apply a suitable primer or bonding agent up to engraved line on outlet body
- Apply asphalt layer: dress over outer rim and down to engraved line on outlet body
- Remove screws
- Offer up grid and check correct angle of dressing
- Fit washer and grid, and secure with screws

NOTE: The polypropylene washer allows the grid to be easily removed for maintenance/clearing

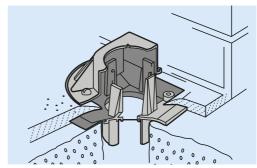


Fig.28

Connection to downpipes

Applicable to: 2172 and 2174 Balcony Outlets

- For 68mm round downpipe (2100): use 2173.3.25 Socket Adaptor
- For 82mm round downpipe (2100.3): connect direct to balcony outlet socket
- Solvent-weld all joints (see page 9)

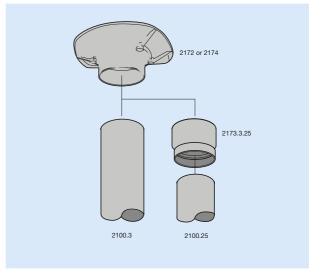


Fig.29

Small Roof Outlets

Small Roof Outlets

Fixing small roof outlet to proprietary plastic finish

Applicable to: all 2180 and 2181 Roof Outlets

- Apply recommended adhesive to flange of outlet body
- Dress plastic material over flange to the edge of opening
- Secure the flat or domed grid with brass screw supplied, lightly clamping the roof finish material in position

Fixing small roof outlet to mineral felt finish

Applicable to: all 2180 and 2181 Roof Outlets

- Apply suitable bitumastic primer to flange of outlet body
- Apply liquid bitumen or activator to roof and prepared area of flange
- Lay first layer of felt to edge of flange
- Dress second and third layers over the flange to the edge of the opening
- Secure the flat or domed grid with the brass screw supplied, lightly clamping the edge of the second and third layers of felt

NOTE: 2180 and 2181 outlets are not suitable for use with hot asphalt

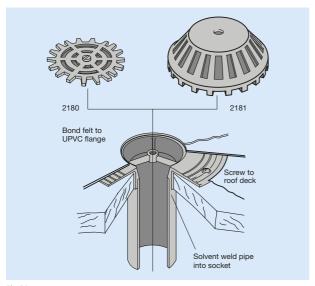


Fig.30

Connecting spigot/socket bends (small roof outlets)

Applicable to: all small diameter roof outlet

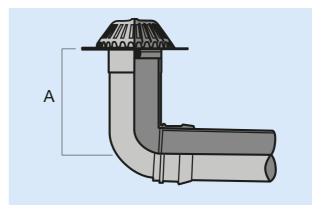


Fig.31 2181.2 Domed Outlet (small diameter)

Fittings	Outlet	Dimension A (mm)	
	size (mm) [–]		
2180.2 + 207.2.92	55	73	118
2181.2 + 207.2.92	55	73	118
2180.3 + 107.3.92	82	89	168
2181.3 + 107.3.92	82	89	168

Large Roof Outlets

Grid Options

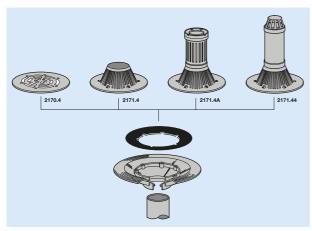


Fig.32

NOTE: 2170 flat roof outlet is not suitable for vehicular traffic

Fixing to asphalt finish

Applicable to: all 2170 and 2171 Roof Outlets

- Apply suitable bitumastic primer or bonding agent to bowl and flange of outlet body
- Dress a 19mm layer of asphalt over flange and bowl to level of upstand
- Offer up selected grid (see Fig.32 for alternative grids) check correct angle of dressing and engagement of screws
- Secure grid and washer in position with screws supplied

NOTE: The polypropylene washer allows the grid to be easily removed for maintenance/clearing

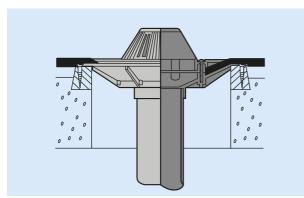


Fig.33 2171.4 Domed Outlet

Fixing to mineral felt finish

Applicable to: all 2170 and 2171 Roof Outlets

- Apply suitable bitumastic primer or bonding agent to bowl and flange of outlet body
- Apply liquid bitumen or activator to roof and prepared areas of outlet body
- Lay first layer of felt to edge of flange
- Lay second and third layers over roof outlet
- Dress down into bowl to the upstand
- Secure grid and washer in position with screws supplied

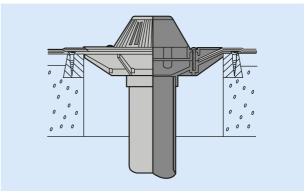


Fig.34 2171.4 Domed Outlet

Fixing to proprietary plastic finish

Applicable to: all 2170 and 2171 Roof Outlets

- Apply recommended adhesive to bowl and flange of outlet body
- Lay plastic material over roof outlet
- Dress over flange and bowl to the level of the upstand
- Secure grid and washer with screws supplied (see Fig.32 for alternative grids)

NOTE: The polypropylene washer allows the grid to be easily removed for maintenance/clearing


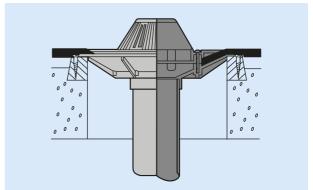


Fig.35 2171.4 Domed Outlet


Large Roof Outlets

Anchoring on thin or uneven roof structures

Applicable to: all 2170 and 2171 Roof Outlets

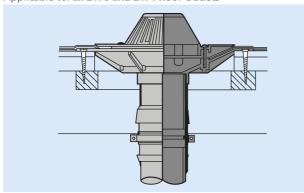

Three-layer felt on insulation material over profiled metal decking

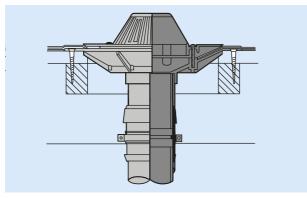

Three-layer felt on thin timber decking

Connecting spigot/socket bends (large roof outlets)

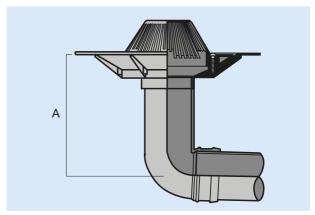


Fig.37 2171.4 Domed Outlet

Applicable to: all large roof outlets

Fittings	Outlet	Dimension A (mm)	
	size (mm) [–]		
2170.3 + 107.3.92	82	140	219
2171.3 + 107.3.92	82	140	219
2170.4 + 107.4.92	110	146	257
2171.4 + 107.4.92	110	146	257

General fixing details

Applicable to: balcony and roof outlets

- Solvent weld pipe-end, or spigot of bend, to roof outlet (for jointing techniques, refer to sitework instructions)
- Locate outlet body in roof structure and check that a suitable rigid fixing can be made
- Screw down outlet firmly to roof structure
- Remove grid
- Apply selected roof finish

Design Considerations

Design Considerations - Above Ground Drainage

Building regulations requirements

All sanitary pipework and drainage installations must satisfy the relevant requirements of Part H of the approved documents to the England, Wales and Northern Ireland Building Regulations and the Building (Scotland) Regulations 2004.

Installations in accordance with BS EN 12056:2 Code of practice for sanitary pipework will also meet Building Regulations requirements.

Ventilation

The discharge stack must be ventilated in order to prevent pressure building up within the system and drawing the water seals in the traps. Separate ventilation of branch pipes is required only if the length and slope of the branch exceeds the following dimensions:

Maximum length:

(32mm) 1.7 metres

(40mm) 3 metres

(50mm) 4 metres

Slope: 18-90mm per metre

In such cases, the branch pipe should be ventilated by a branch ventilating pipe or an anti-syphon trap should be fitted. The Automatic Air Admittance Valve reduces the number of stack ventilating pipes required to penetrate the roof in multi-installations, without affecting performance of the drainage system.

Thermal expansion

Within a solvent-weld system it is important to make adequate allowance for thermal movement. This is most easily achieved by fitting an expansion ring seal joint between two fixed solvent-weld joints. The expansion gap should be created by pushing the spigot fully into the ring seal socket, and marking the position at the socket face. Then withdraw the spigot by 10mm. Check subsequently to ensure that the expansion gap is not lost during further installation work.

Branch connections

The distance between the centreline of the lowest branch connection to the discharge stack and the invert of the bend at the foot of the stack should be in accordance with the following:

- ≤3 storeys 450mm min.
- ≤5 storeys 750mm min.

- 5 storeys + Ground floor connections should discharge direct to drain or into their own stack
- 20 storeys + Ground floor and first floor connections should discharge into their own stack

A branch pipe should not discharge into a stack in a way which could cause crossflow into any other branch pipe.

Working temperatures

Terrain Soil and Waste systems may be used to convey liquids with a maximum temperature of 76°C when subjected to continuous flow. Intermittent discharges of up to 100°C may occur provided they are of less than 2 minutes duration.

Chemical discharges

Terrain Soil and Waste systems are generally resistant to most commonly used acids and those that may be discharged to the public sewer system. The rubber seals, however, are less resistant and it is advised that before any chemicals are conveyed through the systems, checks are made to establish their effects on the product. Refer to BS CP 312 Part 1 Code of Practice for Plastic Pipework for further information.

Access

Sufficient and suitable access must be provided to enable all pipework to be tested and maintained effectively. Access covers, plugs or caps should be installed in positions to facilitate use of testing equipment and removal of blockages.

Fire spread

In large commercial or housing developments, compartmentation may be required by the Building Regulations 2010 (Part B). In such cases, any penetrations by sanitary pipework must be suitably fire stopped. Suitable measures include the containment of pipes from floor to ceiling in a fire resistant enclosure (with appropriate fire rating).

Pipe support

Pipes must be adequately supported when installed vertically or horizontally (to falls).

Notes:

1. Gradients

Gradients should be between 1 and 5 degrees with a maximum distance of 3 metres. Distances over 3 metres are prone to blockage and should therefore be provided with access (Terrain Reference 204.15.135 & 237.15).

2. Venting

Maximum distance from stack for unvented system is 1.7 metres according to angle (see diagram A for details). Above 1.7 metres, venting is required, and if this is impractical then a suitable re-sealing trap (415.15) should be used.

3a. Air Admittance Valves

Air admittance valves (Terrain ref. 153.4.3) may be fitted as an alternative to an open vent, however an open vent must be allowed at the head of a drain. For further details see agreement Certificate No 06/4343.

3b. Terrain Pleura

Terrain Pleura may be fitted as an alternative ventilation system. The Pleura 50 protects the fixtures connected to the branch drain with the Pleura 100 and the PAPA together protecting the stack against positive and negative air pressures. An open vent must be allowed at the head of the drain. For further details see BBA Certificate 89/2139.

4. W.C. Connectors

W.C. connectors shown are to horizontal outlet pans (to BSEN997). For traditional P and S outlets a Terrain 495.4.5 or 492.4.5 connector should be used.

5. Stub Stacks

Stub stacks are used to connect one set of domestic appliances. A to be maximum of 2.0 metres and B (to crown of W.C. trap) to be maximum of 1.5 metres.

6. Connection Zones

Although four bosses have been provided on branches and access pipes certain connections are not allowed under BS5572. For permitted connections, see diagrams.

7. Distances

Distance must be a minimum of 450mm for single houses up to 3 storeys, or a minimum of 750mm up to 5 storeys, or one storey height for 5 storey buildings and over.

Minimum radius of bend 200mm or alternative of 2

No. 45 degree bends.

8. Support and Expansion

Expansion should be allowed every 4.0 metres for 82mm, 110mm and 160mm and 2.0mtrs for 36mm, 43mm & 56mm respectively both vertically and horizontally.


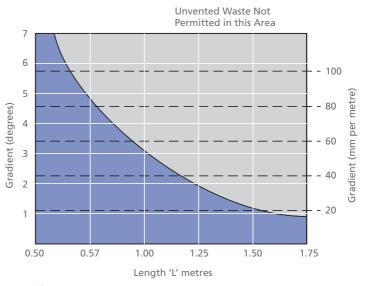



Diagram A

UK Design Principles


UK Principles of Stack Venting for Soil and Waste Drainage

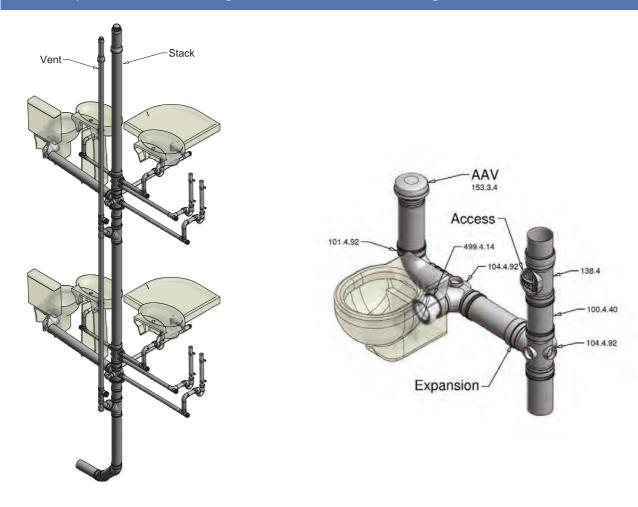

Traditional stack Vent

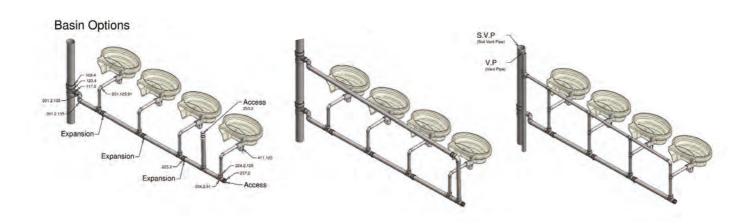



UK Principles of Stack Venting for Soil and Waste Drainage

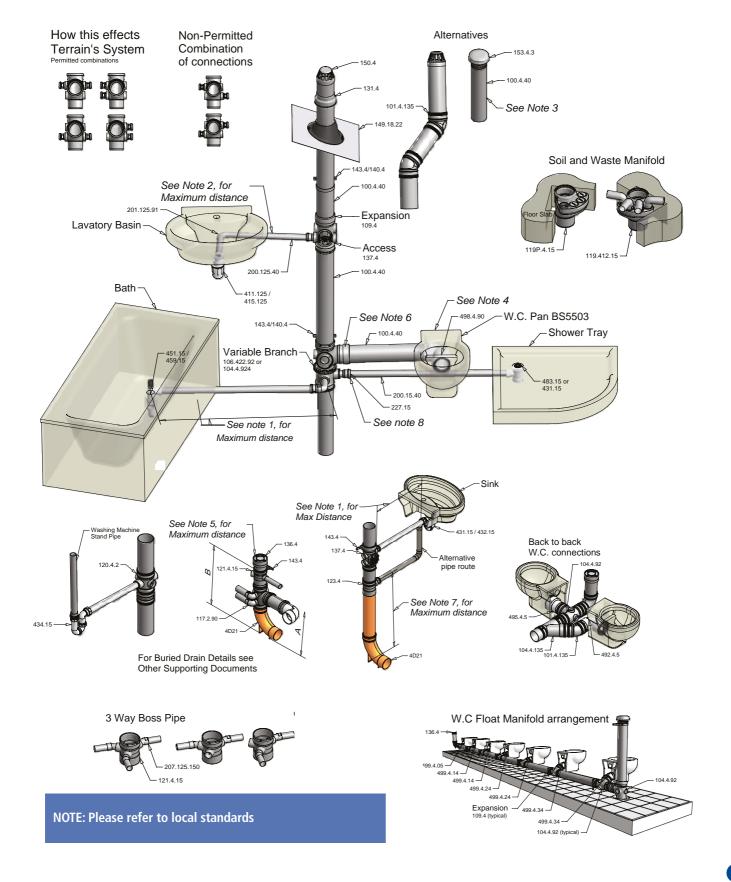


Middle East Design Principles


Middle East Design Principles

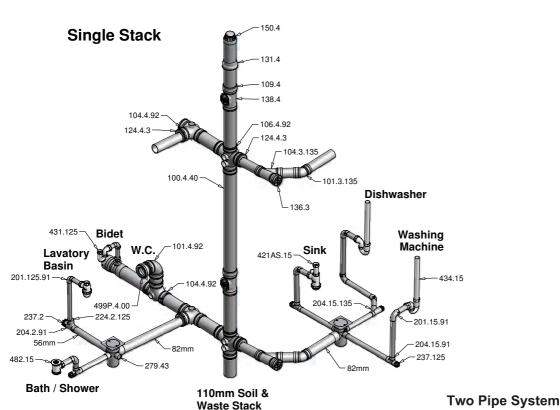

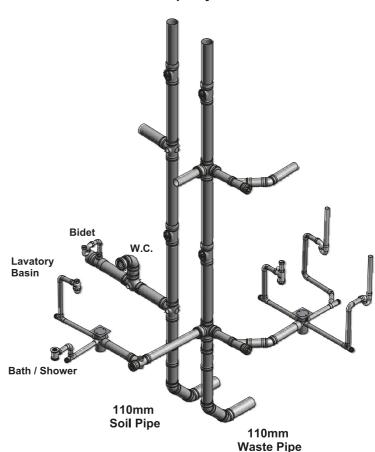

Middle East Design Principles

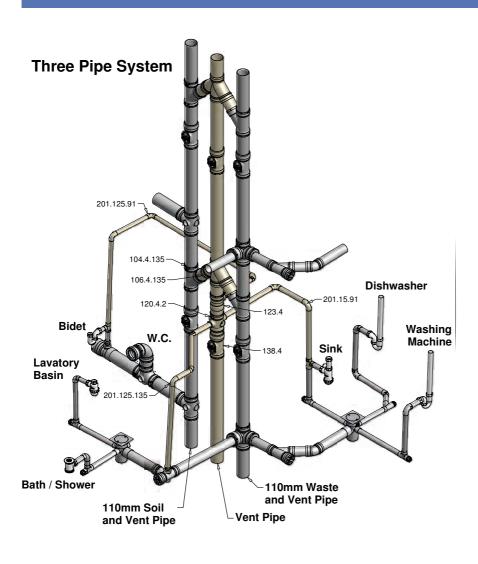

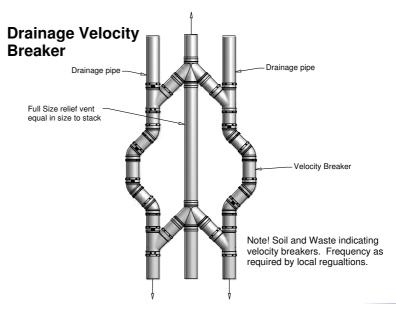

Design Data - Soil & Waste Drainage

Table A: Discharge units (DU) Values

Appliance	System III DU I/s
Wash basin, bidet	0.3
Shower without plug	0.4
Shower with plug	1.3
Single urinal with cistern	0.4
Urinal with flushing valve	-
Slab urinal	0.2*
Bath	1.3
Kitchen sink	1.3
Dishwasher (household)	0.2
Washing machine up to 6kg	0.6
Washing machine up to 12Kg	1.2
WC with 4.0L cistern	**
WC with 6.0L cistern	1.2 to 1.7***
WC with 7.5L cistern	1.4 to 1.8***
WC with 9.0L cistern	1.6 to 2.0***
Floor gully DN 50	-
Floor gully DN 70	-
Floor gully DN 100	-

- * Per person.
- ** Not permitted.
- *** Depending upon type (valid for WC's with siphon flush cistern only).
- Not used or no data.

Example:

2 W/MC

10 storey building with

	500.09	Dananig	******
2	WC		
4	WHB		
2	Baths		On each floor
2	Sinks		

 $2 \times 1.5 = 3.0$ $4 \times 0.3 = 1.2$ $2 \times 1.3 = 2.6$

2 x 1.3 = 2.6

 $2 \times 0.6 = 1.2$

10.6 x 9 = 95.4 DU

Domestic Building Use K = 0.7

 $0.7 \sqrt{95.4} = 6.84 \text{ l/s}$

See Table C and D for capacities of pipes.

Table B: Typical frequency factors (K)

Usage of appliances	K
Intermittent use, e.g. in dwelling, guest-house, office	0.5
Frequent use, e.g. in hospital, school, restaurant, hotel	0.7
Congestred use, e.g. in toilets and/or showers open to public	1.0
Special use, e.g. laboratory	1.2

Frequency factor (K)

Typical frequency factors associated with different usage of appliances Table B.

Calculation of flowrate Waste water flowrate (Qww)

Qww is the expected flowrate of waste water in a part or in the whole drainage system where only domestic sanitary appliances are connected to the system

Qww = K√∑DU

where:

Qww = Waste water flowrate (L/s)

K = Frequency factor

 $\Sigma DU = Sum of discharge units.$

NB: Under no circumstances should pipe of a larger diameter be connected to pipe of a smaller diameter in the direction of flow.

Table C: Stack with only Primary Vent

Stack & Stack Vent	System I, II, III, IV Q max (L/s)			
DN	Square # entries	Swept entries		
60	0.5	0.7		
70	1.5	2.0		
80*	2.0	2.6		
90*	2.7	3.5		
100**	4.0	5.2		
125	5.8	7.6		
150	9.5	12.4		
200	16.0	21.0		

^{*} Minimum size where WC's are connected in system II.

Table D: Stack with Secondary Venting

Stack & Stack Vent	Secondary Vent	System I, II, III, IV Q max (L/s)		
DN	DN	Square # entries	Swept entries	
60	50	0.7	0.9	
70	50	2.0	2.6	
80*	50	2.6	3.4	
90*	50	3.5	4.6	
100**	50	5.6	7.3	
125	70	7.6	10.0	
150	80	12.4	18.3	
200	100	21.0	27.3	

^{*} Minimum size where WC's are connected in system II.

For branch pipe sizing based on System III the following sizing charts should be used.

For branch pipe sizing based on system in the rollowing sizing						
Appliance	Dia. DN	Min. trap seal depth (mm)	Max. length (L) of pipe from trap outlet to stack (m)	Pipe gradient	Max. no. of bends	Max. drop (H) (m)
Limitations for unve	ntilat	ed branch	discharge p	ipes, syste	m III	
Washbasin, bidet (30mm diameter trap)	30	75	1.7	2.2 ¹⁾	0	0
Washbasin, bidet (30mm diameter trap)	30	75	1.1	4.41)	0	0
Washbasin, bidet (30mm diameter trap)	30	75	0.7	8.7 ¹⁾	0	0
Washbasin, bidet (30mm diameter trap)	40	75	3.0	1.8 to 4.4	2	0
Shower, bath	40	50	No Limit ²⁾	1.8 to 9.0	No Limit	1.5
Bowl urinal	40	75	3.0 ³⁾	1.8 to 9.0	No Limit ⁴⁾	1.5
Trough urinal	50	75	3.0 ³⁾	1.8 to 9.0	No Limit ⁴⁾	1.5
Slab urinal ³⁾	60	50	3.0 ³⁾	1.8 to 9.0	No Limit ⁴⁾	1.5
Kitchen sink (40mm diameter trap)	40	75	No Limit ²⁾	1.8 to 9.0	No Limit	1.5
Household dishwasher or washing machine	40	75	3.0	1.8 to 4.4	No Limit	1.5
WC with outlet up to 80mm ⁶⁾	75	50	No Limit	1.8 min	No Limit ⁴⁾	1.5
WC with outlet greater than 80mm ⁶⁾	100	50	No Limit	1.8 min	No Limit ⁴⁾	1.5
Food waste disposal ⁷⁾	40 min	75 ⁸⁾	3.0 ³⁾	13.5 min	No Limit ⁴⁾	1.5
Sanitary towel disposal unit	40 min	75 ⁸⁾	3.0 ³⁾	5.4 min	No Limit ⁴⁾	1.5
Floor drain	50	50	No Limit ³⁾	1.8 min	No Limit	1.5
Floor drain	50	50	No Limit ³⁾	1.8 min	No Limit	1.5
Floor drain	100	50	No Limit ³⁾	1.8 min	No Limit	1.5
4 basins	50	75	4.0	1.8 to 4.4	0	0
Bowl urinals ³⁾	50	75	No Limit ³⁾	1.8 to 1.9	No Limit ⁴⁾	1.5
Maximum of 8 WC's ⁶⁾	100	50	15.0	0.9 to 9.0	2	1.5
Up to 5 spray tap basins ⁹⁾	30 max	50	4.5 ³⁾	1.8 to 4.4	No Limit ⁴⁾	0

- 1) Steeper gradient permitted if pipe is less than maximum permitted length.
- If length is greater than 3m noisy discharge may result with an increased risk of blockage.
 Should be as short as possible to limit problems with deposition.
- 4) Sharp throated bends should be avoided.
- For slab urinal for up to 7 persons. Longer slabs to have more than one outlet.
- 6) Swept-entry branches serving WC's.
- Includes small potato-peeling machines.
- 8) Tubular not bottle or resealing traps.
- Spray tap basins shall have flush-grated wastes without plugs.

Ventilated discharge branches: Sizes and limitations upon the use of ventilated discharge branches are given in the tables above. Limitations given in the second table are simplifications, for further information see national and local regulations and practice.

Appliance	Dia. DN	Min. trap seal depth mm	Max. length (L) of pipe from trap outlet to stack m	Pipe gradient	Max. no. of bends	Max. drop (H) m
Limitations for vent	ilated b	ranch dis	charge pipe	s, system	Ш	
Washbasin, bidet (30mm diameter trap)	30	75	3.0	1.8 min	2	3.0
Washbasin, bidet (30mm diameter trap)	40	75	3.0	1.8 min	No Limit	0
Shower, bath	40	50	No Limit ²⁾	1.8 min	No Limit	No Limit
Bowl urinal	40	75	3.0 ³⁾	1.8 min	No Limit ⁴⁾	3.0
Trough urinal	50	75	3.0 ³⁾	1.8 min	No Limit ⁴⁾	3.0
Slab urinal ³⁾	60	50	3.0 ³⁾	1.8 min	No Limit ⁴⁾	3.0
Kitchen sink (40mm diameter trap)	40	75	No Limit ²⁾	1.8 min	No Limit	No Limit
Household dishwasher or washing machine	40	75	No Limit ³⁾	1.8 min	No Limit	No Limit
WC with outlet up to 80mm ^{6) & 14)}	75	50	No Limit	1.8 min	No Limit ⁴⁾	1.5
WC with outlet greater than 80mm ^{6) & 14)}	100	50	No Limit	1.8 min	No Limit ⁴⁾	1.5
Food waste disposal ⁷⁾	40 min	75 ⁸⁾	3.0 ³⁾	13.5 min	No Limit ⁴⁾	3.0
Sanitary towel disposal unit	40 min	75 ⁸⁾	3.0 ³⁾	5.4 min	No Limit ⁴⁾	3.0
Bath drain, floor drain	50	50	No Limit ³⁾	1.8 min	No Limit	No Limit
Floor drain	70	50	No Limit ³⁾	1.8 min	No Limit	No Limit
Floor drain	100	50	No Limit ³⁾	1.8 min	No Limit	No Limit
5 basins ⁹⁾	50	75	7.0	1.8 to 4.4	2)	0
10 basins ^{9) & 10)}	50	75	10.0	1.8 to 1.9	No Limit	0
Bowl urinals ^{9) & 11)}	50	70	No Limit ³⁾	1.8 min	No Limit ⁴⁾	No Limit
More than 8 WC's ⁶⁾	100	50	No Limit	0.9 min	No Limit	No Limit
Up to 5 spray tap basins ⁹⁾	30 max	50	No Limit ³⁾	1.8 to 4.4	No Limit ⁴⁾	0
tap basilis						

- 1) For maximum distances from trap to vent (see Figure 8 of BS EN 1205-2:2000).
- 2) If length is greater than 3m noisy discharge may result with an increased risk of blockage.
- 3) Should be as short as possible to limit problems with deposition.
- 4) Sharp throated bends should be avoided.
- For slab urinal for up to 7 persons. Longer slabs to have more than one outlet.
- 6) Swept-entry branches serving WC's.
- 7) Includes small potato-peeling machines.
- Tubular not bottle or resealing traps.
- 9) See Figure 9 of BS EN 12056-2:2000).
- 10) Every basin shall be individually ventilated.
- 11) Any number.
- 2) Spray tap basins shall have flush-grated wastes without plugs.
- 13) The size of ventilating pipes to branches from appliances can be DN 25 but, if they are longer than 15m or contain more than five bends, a DN 30 pipe shall be used.
- 14) If the connection of the ventilating pipe is liable to blockage due to repeated splashing or submergence, it should be DN 50, up to 50mm above the spill-over of the appliance.

^{**} Minimum size where WC's are connected in system I, III, IV. # Equal branch junctions that are more than 45°, or has a centre line radius less than the internal pipe diameter.

^{**} Minimum size where WC's are connected in system I, III, IV. # Equal branch junctions that are more than 45°, or has a centre line radius less than the internal pipe diameter.

Design Data - Rainwater

Basic Principles for Rainwater Designs

Sizing of rainwater installations

The following general guidelines are based on BS EN 12056-3:2000 *Gravity Drainage Systems Inside Buildings – Roof Drainage, Layout and Calculations.*

There are two factors to consider when calculating the rainwater flow from a roof, firstly the design rainfall intensity to be used and the effective roof area to be drained.

Rainfall Intensity

It is important to confirm the design rainfall intensity with the client before carrying out any design work; this can be done by calculation (refer to BS EN 12056-3:2000) or based on local requirements.

Effective Roof Area

Before the effective roof area can be calculated it is necessary to determine if the calculation will be affected by:

- a) Snow, (Section NB4, BS EN 12056-3:2000) details the design requirements for snow which should be taken into account.
- b) Wind, there is no requirement to allow for the effect of wind when designing a rainwater system for flat roofs or roofs protected from the wind by adjacent buildings. However, the wind and the roof slope can have the effect of increasing the flow of rainwater from the roof of unprotected pitched roofs.

Note: Flat roofs should be designed to allow for structural deflection under dead and imposed loads, BS 6229:2003, table 6 details the minimum finished falls for a flat roof dependent upon the roof covering.

c) Tall Buildings, when draining onto a lower level roof the effective catchment area of a wall should be taken as 50% of its area up to a maximum exposed height of 10m

The effective roof area can be calculated using the following formulae,

Flat roof

 $A(m^2) = L \times B$ where

A = Effective roof area (square metres)

L = Length of roof (metres) B = Width of roof (metres)

Pitched roof

 $A(m^2) = L \times (B+H/2)$ where:

A = Effective roof area (square metres)

L = Length of roof (metres)

B = Width of roof (metres)

H = Height of rood between eaves and ridge (metres)

If an adjacent wall is to incorporated into the equation then the following needs to be added to the two formulae

0.5 (l x w) where

L is up to maximum of 10m

Calculating design flow

Having determined the rainfall intensity (mm/hr) and effective roof area, A(m2), the following calculation is required to establish the actual design flow from the roof.


Flow rate, Q (l/s) =
$$\frac{A(m2) \times RI (mm/hr)}{3600}$$

Example

A 20 storey residential block has a roof plan of 40 m x 25 m, there is also a podium level at level 3 with plan dimensions of 40 m x 25 m. The podium has been designed as a flat roof with a parapet around the perimeter. The roof will have a minimum slope towards the parapet, rainwater will discharge into a 50 mm formed gutter

Local regulations have determined a design rainfall intensity of 75mm/hr.

Terrain domed PVCu outlets are to be installed on the main roof and flat grated outlets are to be installed at podium level. All outlets are to discharge into PVCu rainwater pipes.

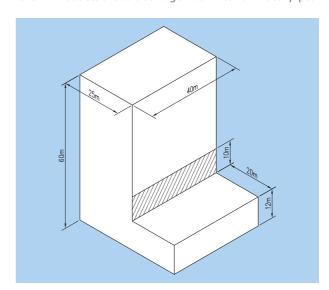

Basic Principles for Rainwater Designs

Step 1, Determine roof area to be drained and flow rate.

Main Roof				
Effective roof area	A(m ²)	= (L x B)		
	Α	= (40	x25)	
	Α	= 1000	0 m²	
Flow rate	Q (l/s)	=	A(m²) x RI (mm/hr)	
			3600	
	Q =		1000 x 75	
			3600	
	Q =		20.83 l/s	
Podium Roof				
Effective roof area	A(m ²)	= (L x	B) + 0.5 (l x w)	
	Α	= (40	x20) + 0.5 (10 X 40)	
	Α	= (800)) + (200)	
	Α	= 1000	0 m²	
Flow rate	Q (l/s)	=	A(m²) x RI (mm/hr)	
			3600	
	Q =		1000 x 75	
			3600	
	Q =		20.83 l/s	

Step 2, Determine No of rainwater outlets required.

The table below details the flow rates achieved through terrain rainwater outlets for a given head of water over the outlet during a 75mm/hr rainfall intensity.

Roof Outlet	Size (mm)	Flow capacity litres/sec Head of water at Outlet				
Part No.		30mm	50mm	100mm		
2180.2	50	0.88	1.18	1.78		
2180.3	82	2.12	2.52	3.21		
2181.2	50	2.00	2.27	2.69		
2181.3	82	2.1	4.89	7.22		
2170.3	82	9.18	11.08	13.67		
2170.4	110	9.29	14.11	18.22		
2171.3	82	4.94	9.24	16.64		
2171.4	110	5.17	9.95	24.18		

To suit the design of the main roof 5 No 2171.3 outlets will be installed based on a flow rate of 4.94 l/s, (head over outlet 30mm). This allows for a total of 24.7 l/s to be collected and discharged from the roof.

To suit the design of the podium roof 4 No 2170 .3 outlets will be installed based on a flow rate of 9.18 l/s, (head over outlet 30mm). This allows for a total of 36.72 l/s to be collected and discharged from the roof.

Step 3, Determine size of rainwater pipes required.

BS EN 12056-3:2000, Table 8 – capacities of vertical rainwater pipes, recommends the maximum design flow in vertical circular rainwater pipes.

Internal diameter of rainwater pipe (mm)	ŘV	acity VP 's)	Internal diameter of rainwater pipe (mm)	ŔV	acity VP 's)
	Filling Degree f =0.20	Filling Degree f =0.33		Filling Degree f =0.20	Filling Degree f =0.33
55	0.9	2.2	150	13.7	31.6
60	1.2	2.7	160	16.3	37.5
65	1.5	3.4	170	19.1	44.1
70	1.8	4.1	180	22.3	51.4
75	2.2	5	190	25.7	59.3
80	2.6	5.9	200	29.5	68
85	3.0	6.9	220	38.1	87.7
90	3.5	8.1	240	48	110.6
95	4.0	9.3	260	59.4	137
100	4.6	10.7	280	72.4	166.9
110	6.0	13.8	300	87.1	200.6
120 130	7.6 9.4	17.4 21.6	> 300	Eaton	Use wyly- Eaton equation

A filling degree of 0.33 shall be used unless national/local regulations and practice states that another filling factor should be used.

From our example, for the main roof we have chosen two number 110mm rainwater pipes collecting each collecting two rainwater outlets discharging a maximum of 4.94l/s. From The table above a 100mm internal rainwater pipe would be required (capacity 10.7l/s). Terrain 110mm PVCu pipework has an internal diameter of 103.6mm and is acceptable.

The podium roof will be collected and discharged through four number 110mm rainwater pipes each discharging a maximum of 9.18 l/s.

Note: where horizontal pipe runs are required, BS EN 12056-3:2000, table C.1 should be referred to, to ensure that the correct pipe size is chosen for the proposed gradient.

Fabrication Service

Fabrication Service

Pre-fabrication

Shortage of skilled labour is just one reason for the growth of pre-fabrication within construction. Moving significant elements of the process from site to factory provides improvements in quality, cost and time predictability, productivity and safety.

With unrivalled expertise in PVC fabrication systems, our Fabrication Service has been helping specifiers and contractors overcome problems, both at the design stage and on site.

Specialists in fabrication

The Terrain Fabrication team works closely with our Technical Services Department, employing the latest design and manufacturing technologies.

Together, they produce high quality Pre-fabricated Stacks and Specials, either by making modifications to existing products from the Terrain range, or by conceiving components from scratch to deal with particularly awkward problems.

Where fittings are designed specially, CAD technology is used to provide accurate drawings, along with indications of all relevant dimensions.

Our fabrication team provides services in two key areas.

Standard specials

- These are produced by making slight modifications to existing Terrain products to suit frequently occurring design problems.
- These products tend to be required regularly, but in small quantities.
- Delivery lead time is usually the same as for standard catalogue items.

Custom specials

- These are designed and fabricated specifically to meet the unique design requirements created by special architectural features. They can be made not only on a one-off or small batch basis, but also in their hundreds, subject to the demands of your particular project.
- They can be produced to your precise specification in virtually any size or shape.
- Custom Specials provide solutions to otherwise unsolvable design problems.
- Delivery time depends upon the complexity of the design and number required.

Pre fabricated stacks

Prefab Stacks consist of soil and waste pipes and fittings pre-assembled at the factory to pre-determined lengths to provide a modular soil and vent stack.

These offer a number of benefits:

- Time and labour costs on site are reduced by minimising the joints to be made.
- Highly efficient for commercial, leisure and housing projects where identical plumbing arrangements are repeated a number of times.
- Can be quickly installed, reducing the need to re-locate residents, making them ideal for refurbishment work.

Three easy steps for our special fabrication service

It couldn't be simpler to order Specials or have a Pre-fabricated Stack manufactured for you.

- Send a dimensioned sketch and specification by email, fax or post to our Technical Services Department.
- We will then advise you on design possibilities and send you back CAD diagrams, if necessary, complete with a part number and price for your approval.

If the special is being incorporated into the design stage of a drainage layout, be sure to include the unique part number with any plans to be passed to the contractor.

 You place the order through your local merchant, stating the unique product number and price.



Certifications

Certifications

Certifications



Manufacturing Standards



BS 5255:1989 Specification for Thermoplastics Waste Pipe and Fittings

BS 4514:2001 PVC Soil and Ventilation Pipes, Fittings and Accessories

BS EN 1329:2000 Plastic Piping Systems for Soil and Waste Discharge

BS EN 1566:2000 Plastic Piping Systems for Soil and Waste Discharge (Chlorinated)

BS EN 12380 A1 Air Admittance Valve

BS EN 12380 A1 Air Admittance Valve (Pleura System)

BS EN 1366-3 Terrain Firetrap Sleeves and Collars

Quality Management Systems Standards

EN ISO 9001:2008 Management System

EN ISO14001:2004 Management System

BS OHSAS 18001:2007 Management System

PASS 99:2006 Integrated Management Registration

Index

Code	Product Description	Page No.
100.3.30	SOIL PIPE - PLAIN ENDED	5
100.3.40	SOIL PIPE - PLAIN ENDED	5
100.4.30	SOIL PIPE - PLAIN ENDED	5
100.4.40	SOIL PIPE - PLAIN ENDED	5
100.6.30	SOIL PIPE - PLAIN ENDED	5
100.6.40	SOIL PIPE - PLAIN ENDED	5
100.8.40	SOIL PIPE	20
100.10.40	SOIL PIPE	20
101.3.92	SWEPT BEND DOUBLE SOCKET	5
101.3.135	SWEPT BEND DOUBLE SOCKET	5
101.4.025	VARIABLE BEND SPIGOT/SOCKET	6
101.4.92	SWEPT BEND DOUBLE SOCKET	5
101.4.104	SWEPT BEND DOUBLE SOCKET	5
101.4.112	SWEPT BEND DOUBLE SOCKET	5
101.4.135	SWEPT BEND DOUBLE SOCKET	5
101.6.92	SWEPT BEND DOUBLE SOCKET	5
101.6.135	SWEPT BEND DOUBLE SOCKET	5
103.4.92	ACCESS BEND DOUBLE SOCKET	9
104.3.92	SINGLE EQUAL BRANCH TRIPLE SOCKET	6
104.3.92	SINGLE EQUAL BRANCH TRIPLE SOCKET	6
104.3.135	SINGLE EQUAL BRANCH TRIPLE SOCKET	6
104.4.92	SINGLE EQUAL BRANCH TRIPLE SOCKET	6
104.4.92	SINGLE EQUAL BRANCH TRIPLE SOCKET	6
104.4.104	SINGLE EQUAL BRANCH	6
104.4.135	SINGLE EQUAL BRANCH	6
104.4.924	SINGLE EQUAL BRANCH TRIPLE SOCKET	6
104.4.924	SINGLE EQUAL BRANCH TRIPLE SOCKET	6
104.6.92	SINGLE EQUAL BRANCH TRIPLE SOCKET	6
104.6.92	SINGLE EQUAL BRANCH TRIPLE SOCKET	6
104.6.135	SINGLE EQUAL BRANCH	6
104.64.92	SINGLE UNEQUAL BRANCH TRIPLE SOCKET	7
104.64.135	SINGLE UNEQUAL BRANCH TRIPLE SOCKET	7
104.104.92	SINGLE BRANCH SPIGOT OUTLET	7
104.412.92	SINGLE EQUAL BRANCH VARIABLE BOSS	7
104.422.92	SINGLE EQUAL BRANCH VARIABLE BOSS	7
105.4.92	SINGLE ACCESS BRANCH TRIPLE SOCKET	9
106.3.92	DOUBLE BRANCH	8
106.4.92	DOUBLE BRANCH	8
106.4.135	DOUBLE BRANCH	8
106.6.135	DOUBLE BRANCH	8
106.64.92	DOUBLE UNEQUAL BRANCH	8
106.104.92	DOUBLE BRANCH	8
106.490.12	CORNER BOSS BRANCH	8
106.490.22	CORNER BOSS BRANCH	8
106.490.92	CORNER BRANCH TRIPLE SOCKET	7
107.3.92	SPIGOT SOCKET BENDS	6
107.4.025	VARIABLE BEND SPIGOT/SOCKET	6
107.4.92	SPIGOT SOCKET BENDS	6
107.4.135	SPIGOT SOCKET BENDS	6
109.3	RING SEAL ADAPTOR	5
109.4	RING SEAL ADAPTOR	5
109.6	RING SEAL ADAPTOR	5
	SERENDIN FOR	,

Code	Product Description	Page No.
110.3	STRAIGHT COUPLER DOUBLE SOCKET	5
110.4	STRAIGHT COUPLER DOUBLE SOCKET	5
110.6	STRAIGHT COUPLER DOUBLE SOCKET	5
111.3	EXPANSION COUPLER	5
111.4	EXPANSION COUPLER	5
111.6	EXPANSION COUPLER	5
111.S.3	SLIP COUPLER DOUBLE SOCKET	5
111.S.3	SLIP COUPLER DOUBLE SOCKET	23
111.S.4	SLIP COUPLER DOUBLE SOCKET	5
111.S.4	SLIP COUPLER DOUBLE SOCKET	23
111.S.6	SLIP COUPLER DOUBLE SOCKET	5
111.S.6	SLIP COUPLER DOUBLE SOCKET	23
112.3.15	TWO PART WASTE BOSS SOLVENT SOCKET	10
112.4.2	TWO PART WASTE BOSS SOLVENT SOCKET	10
112.4.15	TWO PART WASTE BOSS SOLVENT SOCKET	10
112.4.125	TWO PART WASTE BOSS SOLVENT SOCKET	10
112.6.2	TWO PART WASTE BOSS SOLVENT SOCKET	10
117.2.90	BOSS ADAPTOR BEND SOLVENT SOCKET	14
117.2.150	BOSS ADAPTOR BEND SOLVENT SOCKET	14
117.2	STRAIGHT BOSS ADAPTOR RING SEAL SOCKET	14
117.2	BOSS ADAPTORS STRAIGHT	28
117.15.90	BOSS ADAPTOR BEND SOLVENT SOCKET	14
117.15	STRAIGHT BOSS ADAPTOR RING SEAL SOCKET	14
117.15	BOSS ADAPTORS STRAIGHT	28
117.125	STRAIGHT BOSS ADAPTOR RING SEAL SOCKET	14
117.125	BOSS ADAPTORS STRAIGHT	28
119.412.15	UNIVERSAL SOIL MANIFOLD	11
120.3.2	DOUBLE BOSSED PIPE CONNECTOR DOUBLE SOCKET	11
120.4.2	FOUR-WAY BOSS PIPE DOUBLE SOLVENT SOCKET	11
120.4.15	SINGLE BOSSED PIPE CONNECTOR DOUBLE SOCKET	10
120.4.125	SINGLE BOSSED PIPE CONNECTOR DOUBLE SOCKET	10
120.412.2	FOUR-WAY BOSS PIPE DOUBLE SOLVENT SOCKET/SPIGOT	11
120.412.15	SINGLE BOSSED PIPE CONNECTOR SPIGOT	10
121.4.15	TRIPLE BOSSED PIPE CONNECTOR DOUBLE SOCKET	11
122.4.2	SELF LOCKING BOSS SEAL RING SOCKET	10
122.4.15	SELF LOCKING BOSS SEAL RING SOCKET	10
122.4.125	SELF LOCKING BOSS SEAL RING SOCKET	10
123.4	SINGLE BOSSED PIPE CONNECTOR DOUBLE SOCKET	10
124.3.2	SOCKET REDUCER	11
124.4.2	SOCKET REDUCER	11
124.4.3	SOCKET REDUCER	11
124.6.4	SOCKET REDUCER	
126.3.12	POST FORMED SOCKET	14
126.4.12	POST FORMED SOCKET	14
130.4	SOCKET PLUG	10
130.4	SOCKET PLUG	29
130.6	SOCKET PLUG	10
130.6	SOCKET PLUG	29
131.3.200	WEATHERING APRON	13
131.3	WEATHERING APRON	13
131.4.200	WEATHERING APRON	13
131.4	WEATHERING APRON	13

Code	Product Description	Page No.
131.6	WEATHERING APRON	13
132.4	PVC-U CAULKING BUSH	14
135.3	ACCESS DOOR	9
135.4	ACCESS DOOR	9
135.6	ACCESS DOOR	9
136.3	ACCESS CAP	9
136.4	ACCESS CAP	9
136.6	ACCESS CAP	9
137.3	ACCESS PIPE CONNECTOR	9
137.4	ACCESS PIPE CONNECTOR	9
138.4	ACCESS PIPE DOUBLE SOCKET	8
139.4	ACCESS PIPE SINGLE SOCKET	8
139.6	ACCESS PIPE SINGLE SOCKET	8
140.3	TWO-PIECE PIPE BRACKET	12
140.4	TWO-PIECE PIPE BRACKET	12
140.6	TWO-PIECE PIPE BRACKET	12
142.4	PIPE BRACKET GALVANISED DRIVE-IN	12
143.3	ONE-PIECE PIPE BRACKET	12
143.4	ONE-PIECE PIPE BRACKET	12
144.4	ADJUSTABLE PIPE BRACKET PLASTIC-COATED	12
149.16.00	WEATHERING SLATES	13
149.18.22	WEATHERING SLATES	13
149.24.22	WEATHERING SLATES	13
150.3	VENT COWL	13
150.4	VENT COWL	13
150.6	VENT COWL	13
152.4	DUCT COWL	13
152.6	DUCT COWL	13
153.3	AUTOMATIC AIR ADMITTANCE VALVE	13
153.4	AUTOMATIC AIR ADMITTANCE VALVE	13
190.3	THERMAL MOVEMENT LIMITER	12
190.4	THERMAL MOVEMENT LIMITER	12
190.6	THERMAL MOVEMENT LIMITER	12
191.3	INTERMEDIATE SUPPORT BRACKET	12
191.4	INTERMEDIATE SUPPORT BRACKET	12
191.6	INTERMEDIATE SUPPORT BRACKET	12
200.2.30	WASTE PIPE	31
200.2.40	WASTE PIPE	31
200.15.30	WASTE PIPE	31
200.15.40	WASTE PIPE	31
200.125.30	WASTE PIPE	31
200.125.40	WASTE PIPE	31
201.2.91	SWEPT BEND DOUBLE SOCKET	32
201.2.135	SWEPT BEND DOUBLE SOCKET	32
201.2.165	SWEPT BEND DOUBLE SOCKET	32
201.15.91	SWEPT BEND DOUBLE SOCKET	32
201.15.135	SWEPT BEND DOUBLE SOCKET	32
201.15.165	SWEPT BEND DOUBLE SOCKET	32
201.125.91	SWEPT BEND DOUBLE SOCKET	32
201.125.135	SWEPT BEND DOUBLE SOCKET	32
201.125.165	SWEPT BEND DOUBLE SOCKET	32
202.15.91	KNUCKLE BEND DOUBLE SOCKET	32

Code	Product Description	Page No.
202.125.91	KNUCKLE BEND DOUBLE SOCKET	32
204.2.91	SWEPT TEE ALL SOCKET	32
204.2.135	SWEPT TEE ALL SOCKET	32
204.15.91	SWEPT TEE ALL SOCKET	32
204.15.135	SWEPT TEE ALL SOCKET	32
204.125.91	SWEPT TEE ALL SOCKET	32
204.125.135	SWEPT TEE ALL SOCKET	32
206.2.91	SWEPT CROSS ALL SOCKET	32
206.2.135	SWEPT CROSS ALL SOCKET	32
206.15.91	SWEPT CROSS ALL SOCKET	32
207.2.92	SPIGOT/SOCKET BENDS	32
207.2.135	SPIGOT/SOCKET BENDS	32
207.15.92	SPIGOT/SOCKET BENDS	32
207.15.135	SPIGOT/SOCKET BENDS	32
207.15.150	SPIGOT/SOCKET BENDS	32
207.125.92	SPIGOT/SOCKET BENDS	32
207.125.135	SPIGOT/SOCKET BENDS	32
207.125.150	SPIGOT/SOCKET BENDS	32
209.2	SEAL RING ADAPTOR	31
210.2	STRAIGHT COUPLER DOUBLE SOCKET	31
210.15	STRAIGHT COUPLER DOUBLE SOCKET	31
210.125	STRAIGHT COUPLER DOUBLE SOCKET	31
211.2	UNION DOUBLE SOCKET	31
211.15	UNION DOUBLE SOCKET	31
211.125	UNION DOUBLE SOCKET	31
212.2	200 WASTE TO MALE IRON	35
212.15	200 WASTE TO MALE IRON	35
212.125	200 WASTE TO MALE IRON	35
213.2	200 WASTE TO FEMALE IRON	36
213.15	200 WASTE TO FEMALE IRON	36
213.125	200 WASTE TO FEMALE IRON	36
216.2	200 WASTE TO MALE IRON	36
216.15	200 WASTE TO MALE IRON	36
216.125	200 WASTE TO MALE IRON	36
217.2	200 WASTE TO FEMALE IRON	36
217.15	200 WASTE TO FEMALE IRON	36
217.125	200 WASTE TO FEMALE IRON	36
218.15	REVERSE NUT ADAPTOR	35
218.125	REVERSE NUT ADAPTOR	35
223.2.15	LEVEL INVERT TAPER	33
223.2.125	LEVEL INVERT TAPER	33
223.15.125	LEVEL INVERT TAPER	33
224.2.15	SOCKET REDUCER	33
224.2.125	SOCKET REDUCER	33
224.15.125	SOCKET REDUCER	33
225.2	EXPANSION COUPLER SEAL RING AND SOLVENT SOCKET	31
225.15	EXPANSION COUPLER SEAL RING AND SOLVENT SOCKET	31
225.125	EXPANSION COUPLER SEAL RING AND SOLVENT SOCKET	31
226.2	POST FORMED STOCKET	35
227.2	SPIGOT SOCKET COUPLER	31
227.15	SPIGOT SOCKET COUPLER	31
227.125	SPIGOT SOCKET COUPLER	31

Index

Code	Product Description	Page No.
231.2	WEATHERING APRON	33
232	CAULKING BUSH	35
237.2	ACCESS PLUG	33
237.15	ACCESS PLUG	33
237.125	ACCESS PLUG	33
240.2	PIPE FIXING CLIP	33
240.15	PIPE FIXING CLIP	33
240.125	PIPE FIXING CLIP	33
242.2	EXPANSION FITTING FIXING CLIP	33
242.15	EXPANSION FITTING FIXING CLIP	33
242.125	EXPANSION FITTING FIXING CLIP	33
250.2	VENT COWL	34
253.2	AUTOMATIC AIR ADMITTANCE VALVE	34
279.432	TRAPPED FLOOR GULLY	34
281.43	TRAPPED FLOOR GULLY	34
281.64	TRAPPED FLOOR GULLY	34
282.6	FLOOR GULLY INLETS	34
283.6	FLOOR GULLY INLETS	34
284.6	SEALED GULLY RAISING PIECE	34
285.6	SEALED GULLY RAISING PIECE	34
300.2.30	WASTE PIPE	41
300.15.30	WASTE PIPE	41
300.125.30	WASTE PIPE	41
301.2.91	SWEPT BEND DOUBLE SOCKET	41
301.2.135	SWEPT BEND DOUBLE SOCKET	41
301.15.91	SWEPT BEND DOUBLE SOCKET	41
301.15.135	SWEPT BEND DOUBLE SOCKET	41
301.125.91	SWEPT BEND DOUBLE SOCKET	41
301.125.135	SWEPT BEND DOUBLE SOCKET	41
302.2.90	KNUCKLE BEND 90° DOUBLE SOCKET	41
302.15.90	KNUCKLE BEND 90° DOUBLE SOCKET	41
302.125.90	KNUCKLE BEND 90° DOUBLE SOCKET	41
304.2.91	SWEPT TEE 911/4°	41
304.15.91	SWEPT TEE 911/4°	41
304.125.91	SWEPT TEE 911/4°	41
307.15.90	SWIVEL ELBOW BEND 90° SINGLE SOCKET/SPIGOT	41
307.125.90	SWIVEL ELBOW BEND 90° SINGLE SOCKET/SPIGOT	41
310.2	STRAIGHT COUPLER DOUBLE SOCKET	41
310.15	STRAIGHT COUPLER DOUBLE SOCKET	41
310.125	STRAIGHT COUPLER DOUBLE SOCKET	41
311.2	TANK CONNECTOR	42
311.15	TANK CONNECTOR	42
311.125	TANK CONNECTOR	42
323.2.15	LEVEL INVERT TAPER	42
323.2.125	LEVEL INVERT TAPER	42
323.15.125	LEVEL INVERT TAPER	42
337.2	ACCESS PLUG	42
337.15	ACCESS PLUG	42
337.125	ACCESS PLUG	42
ر۱۱۷. احت		
340.2	PIPE AND FITTING CLIP	42
	PIPE AND FITTING CLIP PIPE AND FITTING CLIP	42

Code	Product Description	Page No.
407.15.90	P TO S TRAP CONVERSION BEND	46
407.125.90	P TO S TRAP CONVERSION BEND	46
411.15	BOTTLE TRAP	45
411.125	BOTTLE TRAP	45
415.15	RESEALING BOTTLE TRAP	45
415.125	RESEALING BOTTLE TRAP	45
421.15	RESEALING BOTTLE TRAP - ADJUSTABLE TELESCOPIC	45
421.125	RESEALING BOTTLE TRAP - ADJUSTABLE TELESCOPIC	45
431.15	TUBULAR SWIVEL P TRAP	46
431.125	TUBULAR SWIVEL P TRAP	46
432.15	TUBULAR SWIVEL S TRAP	46
432.125	TUBULAR SWIVEL S TRAP	46
433.15	WASHING MACHINE HALF TRAP	47
434.15	WASHING MACHINE TRAP WITH UPSTAND	47
445.15	RUNNING TRAP	46
445.125	RUNNING TRAP	46
451.15	LOW LEVEL BATH TRAP ANTI-SYPHON C/W OVERFLOW HOSE AND CP ROSE	48
455.15	BATH TRAP WITH CLEANING EYE	47
456.15	BATH TRAP C/W OVERFLOW HOSE AND CP ROSE	48
457.15	LOW LEVEL BATH TRAP	48
459.15	LOW LEVEL BATH TRAP C/W OVERFLOW HOSE AND CP ROSE	48
482.15	SHOWER TRAP	48
483.15	SHOWER TRAP	48
484.15	SHOWER TRAP WITH 45° ADJUSTABLE WASTE	48
486.15	SHOWER TRAP WITH 45° ADJUSTABLE WASTE	48
492.4.5	90° WC TURNED CONNECTOR SOCKET OUTLET	51
495.4.5	WC STRAIGHT CONNECTOR SOCKET OUTLET	51
497.35.05	WC FRAME MANIFOLD BEND CONNECTORS FIN SEAL SPIGOT	50
497.35.14	WC FRAME MANIFOLD BEND CONNECTORS FIN SEAL SPIGOT	50
497.35.24	WC FRAME MANIFOLD BEND CONNECTORS FIN SEAL SPIGOT	50
497.35.34	WC FRAME MANIFOLD BEND CONNECTORS FIN SEAL SPIGOT	50
498.4.02	WC CONNECTORS SOCKET OUTLET	51
498.4.025	WC VARIABLE CONNECTOR VARIABLE BEND	51
498.4.90	WC CONNECTORS SOCKET OUTLET	51
499.4.05	WC MANIFOLD CONNECTORS FIN SEAL SPIGOT	50
499.4.14	WC MANIFOLD CONNECTORS FIN SEAL SPIGOT	50
499.4.24	WC MANIFOLD CONNECTORS FIN SEAL SPIGOT	50
499.4.34	WC MANIFOLD CONNECTORS FIN SEAL SPIGOT	50
499.4.90	WC CONNECTOR 90° SPIGOT OUTLET	51
500.75.40	OVERFLOW PIPE	53
501.75.91	BEND DOUBLE SOCKET	53
501.75.135	BEND DOUBLE SOCKET	53
502.75.90	BENT TANK CONNECTOR 90°	54
504.75.91	BRANCH	53
510.125	STRAIGHT COUPLER DOUBLE SOCKET	53
511.75	STRAIGHT TANK CONNECTOR	54
512.75	BSP ADAPTOR SOLVENT-WELD SOCKET AND ¾"BSP SOCKET	54
519.75	REVERSE NUT CONNECTOR	54
524.75	SOCKET REDUCER	53

Code	Product Description	Page No.
540.75	PIPE FIXING CLIP (PLASTIC)	53
590.75	TUNDISH	54
1625.110R	INTUMESCENT PIPE COLLAR	56
1625.160R	INTUMESCENT PIPE COLLAR	56
1625.200R	INTUMESCENT PIPE COLLAR	56
1625.250R	INTUMESCENT PIPE COLLAR	56
1625.55R	INTUMESCENT PIPE COLLAR	56
1625.82R	INTUMESCENT PIPE COLLAR	56
2170.3	FLAT ROOF OUTLET (LARGE)	17
2170.4	FLAT ROOF OUTLET (LARGE)	17
2171.3	DOMED ROOF OUTLET (LARGE)	17
2171.4	DOMED ROOF OUTLET (LARGE)	17
2171.4A	INVERTED ROOF OUTLET	17
2172.3	BALCONY OUTLET	18
2174.3	BALCONY OUTLET	18
2174.44	INVERTED ROOF OUTLET	17
2180.2	FLAT ROOF OUTLET (SMALL DIAMETER)	17
2180.3	FLAT ROOF OUTLET (SMALL DIAMETER)	17
2181.2	DOMED ROOF OUTLET (SMALL DIAMETER)	17
2181.3	DOMED ROOF OUTLET (SMALL DIAMETER)	17
9100.250SW	TERRAIN ACCESSORIES - LIQUID WELD	56
9100.500SW	TERRAIN ACCESSORIES - LIQUID WELD	56
9101.250CF	TERRAIN ACCESSORIES - CLEANING FLUID	56
9104.3	PACKING PIECE	56
9104.4	PACKING PIECE	56
9104.6	PACKING PIECE	56
9105.5	HOLE MARKING TEMPLATE	56
9113	MANIFOLD SEALING INSERT	55
9114	MANIFOLD PLUG (SPARE)	55
9115	TOGGLE BOLT	56
9116.4	SPARE SEAL RINGS (SOIL)	55
9116.6	SPARE SEAL RINGS (SOIL)	55
9119.B	SPARE SEAL RINGS (SOIL)	55
9120	SPARE SEAL RINGS (SOIL)	55
9124	WC PAN SEAL (SOIL)	55
9132.2	SPARE SEAL RING (WASTE)	55
9132.15	SPARE SEAL RING (WASTE)	55
9132.125	SPARE SEAL RING (WASTE)	55
9136.250L	TERRAIN ACCESSORIES - LUBRICANT	56
9136.500L	TERRAIN ACCESSORIES - LUBRICANT	56
9149	SPARE SEAL RINGS (SOIL)	55
9300.4	TERRAIN P.A.P.A.	57
9301.34	TERRAIN PLEURA 100	57
9301.253	TERRAIN PLEURA 50	57
9980	SPARE GRID FOR DOMED ROOF OUTLET	18
9981	SPARE GRID FOR FLAT ROOF OUTLET	18
9990	SPARE GRID FOR BALCONY OUTLET	18
9990	CAP FOR BALCONY OUTLET	18
		23
100P.3.30	SOIL PIPE	23
100P.3.40	SOIL PIPE	
100P.4.30	SOIL PIPE	23
100P.4.40	SOIL PIPE	23


Code	Product Description	Page No.
100P.6.30	SOIL PIPE	23
100P.6.40	SOIL PIPE	23
101D.4.92	DOUBLE SOCKET BEND	27
101P.3.92	SWEPT BEND SPIGOT/SOCKET	23
101P.4.92	SWEPT BEND SPIGOT/SOCKET	23
101P.4.112	SWEPT BEND SPIGOT/SOCKET	23
101P.6.92	SWEPT BEND SPIGOT/SOCKET	23
103P.4.92	ACCESS BEND SINGLE SOCKET	27
104AS.6.135	SINGLE EQUAL BRANCH - NO WASTE BOSS CONNECTIONS	6
104E.4.92	BRANCH SOCKET OUTLET	25
104E.4.135	SINGLE BRANCH SOCKET OUTLET	25
104E.412.92	SINGLE EQUAL BRANCH VARIABLE BOSS	26
104P.3.92	SINGLE BRANCH SPIGOT OUTLET	24
104P.3.135	SINGLE EQUAL BRANCH PLAIN	25
104P.4.92	SINGLE BRANCH SPIGOT OUTLET	24
104P.4.112	SINGLE BRANCH SPIGOT OUTLET	24
104P.4.135	SINGLE EQUAL BRANCH PLAIN	25
104P.6.92	SINGLE BRANCH SPIGOT OUTLET	24
104P.6.135	SINGLE EQUAL BRANCH PLAIN	25
104P.8.135	ALL SOCKET BRANCH EQUAL	20
104P.10.135	ALL SOCKET BRANCH EQUAL	20
104P.64.92	SINGLE BRANCH UNEQUAL SPIGOT OUTLET	24
104P.64.135	SINGLE BRANCH UNEQUAL SPIGOT OUTLET	24
104P.84.135	SINGLE BRANCH SPIGOT OUTLET UNEQUAL	21
104P.86.135	SINGLE BRANCH SPIGOT OUTLET UNEQUAL	21
104P.106.135	SINGLE BRANCH SPIGOT OUTLET UNEQUAL	21
104P.108.135	SINGLE BRANCH SPIGOT OUTLET UNEQUAL	21
105P.3.92	ACCESS BEND SINGLE EQUAL BRANCH SINGLE OUTLET	27
105P.4.92	ACCESS BEND SINGLE EQUAL BRANCH SINGLE OUTLET	27
106E.490.12	CORNER BOSS BRANCH	25
106P.4.92	DOUBLE EQUAL BRANCH SPIGOT OUTLET	26
106P.490.92	CORNER BRANCH SPIGOT OUTLET	25
107P.3.135	SWEPT BEND SPIGOT/SOCKET	23
107P.4.025	ADJUSTABLE BEND SPIGOT OUTLET	26
107P.4.92	TIGHT RADIUS BEND SPIGOT/SOCKET	23
107P.4.135	SWEPT BEND SPIGOT/SOCKET	23
107P.4.VAR	2 PART VARIBLE BEND	24
107P.6.135	SPIGOT SOCKET BENDS	6
107P.6.135	SWEPT BEND SPIGOT/SOCKET	23
107P.8.135	SPIGOT SOCKET BEND	20
107P.10.135	SPIGOT SOCKET BEND	20
110P.3	STRAIGHT COUPLER DOUBLE SOCKET	23
110P.4	STRAIGHT COUPLER DOUBLE SOCKET	23
110P.6	STRAIGHT COUPLER DOUBLE SOCKET	23
110P.8	STRAIGHT COUPLER	20
110P.10	STRAIGHT COUPLER	20
111P.3	PIPE END SOCKET/SPIGOT	23
111P.4	PIPE END SOCKET/SPIGOT	23
112P.4.2	STRAP-ON BOSS	28
112P.4.15	STRAP-ON BOSS	28
112P.4.125	STRAP-ON BOSS	28
115P.4	ADAPTOR SADDLES	14

Index


CodeProduct DescriptionPage N115P.4ADAPTOR SADDLES28119P.4.15UNIVERSAL SOIL MANIFOLD29120P.4.15TRIPLE BOSS COLLAR29120P.4.12.2FOUR-WAY BOSS PIPE PUSH-FIT SOCKET/SPIGOT29123P.3SHORT BOSSED PIPE28123P.4SHORT BOSSED PIPE28123P.3.1282MM BOSS PIPE RING SEAL29124P.3.2LEVEL INVERT TAPER28124P.4.3LEVEL INVERT TAPER28124P.4.4LEVEL INVERT TAPER28124P.6.4LEVEL INVERT TAPER28124P.8.6REDUCERS21124P.8.6REDUCERS21124P.10.4REDUCERS21124P.10.8REDUCERS21136P.3ACCESS PIPE AND COVER SINGLE SOCKET27136P.4ACCESS PIPE AND COVER SINGLE SOCKET27139P.3ACCESS PIPE AND COVER SINGLE SOCKET26139P.4ACCESS PIPE AND COVER SINGLE SOCKET26139P.8ACESS PIPE AND COVER SINGLE SOCKET26139P.8ACESS PIPE AND COVER21411AS.15BOTTLE TRAP ANTI-SYPHON45411AS.15BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC45421AS.15BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC45421AS.15BOTTL	
120P.4.15 TRIPLE BOSS COLLAR 29 120P.4.12.2 FOUR-WAY BOSS PIPE PUSH-FIT SOCKET/SPIGOT 29 123P.3 SHORT BOSSED PIPE 28 123P.4 SHORT BOSSED PIPE 28 123P.3.12 82MM BOSS PIPE RING SEAL 29 124P.3.2 LEVEL INVERT TAPER 28 124P.4.2 LEVEL INVERT TAPER 28 124P.4.3 LEVEL INVERT TAPER 28 124P.6.4 LEVEL INVERT TAPER 28 124P.8.6 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 2	
120P.412.2 FOUR-WAY BOSS PIPE PUSH-FIT SOCKET/SPIGOT 29 123P.3 SHORT BOSSED PIPE 28 123P.4 SHORT BOSSED PIPE 28 123P.312 82MM BOSS PIPE RING SEAL 29 124P.3.2 LEVEL INVERT TAPER 28 124P.4.3 LEVEL INVERT TAPER 28 124P.4.4 LEVEL INVERT TAPER 28 124P.8.4 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 139P.8 ACESS PIPE AND COVER	
123P.3 SHORT BOSSED PIPE 28 123P.4 SHORT BOSSED PIPE 28 123P.312 82MM BOSS PIPE RING SEAL 29 124P.3.2 LEVEL INVERT TAPER 28 124P.4.2 LEVEL INVERT TAPER 28 124P.6.4 LEVEL INVERT TAPER 28 124P.8.6 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.8 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 141AS.125 BOTTLE TRAP ANTI-SYPHON 45 <td></td>	
123P.4 SHORT BOSSED PIPE 28 123P.312 82MM BOSS PIPE RING SEAL 29 124P.3.2 LEVEL INVERT TAPER 28 124P.4.3 LEVEL INVERT TAPER 28 124P.6.4 LEVEL INVERT TAPER 28 124P.8.4 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TE	
123P.312 82MM BOSS PIPE RING SEAL 29 124P.3.2 LEVEL INVERT TAPER 28 124P.4.2 LEVEL INVERT TAPER 28 124P.4.3 LEVEL INVERT TAPER 28 124P.6.4 LEVEL INVERT TAPER 28 124P.8.6 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 141AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15	
124P.3.2 LEVEL INVERT TAPER 28 124P.4.2 LEVEL INVERT TAPER 28 124P.4.3 LEVEL INVERT TAPER 28 124P.6.4 LEVEL INVERT TAPER 28 124P.8.4 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 141AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 <td< td=""><td></td></td<>	
124P.4.2 LEVEL INVERT TAPER 28 124P.4.3 LEVEL INVERT TAPER 28 124P.6.4 LEVEL INVERT TAPER 28 124P.8.4 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TR	
124P.4.3 LEVEL INVERT TAPER 28 124P.6.4 LEVEL INVERT TAPER 28 124P.8.4 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACCESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 141AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 <td></td>	
124P.6.4 LEVEL INVERT TAPER 28 124P.8.4 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
124P.8.4 REDUCERS 21 124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
124P.8.6 REDUCERS 21 124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
124P.10.4 REDUCERS 21 124P.10.6 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
124P.10.6 REDUCERS 21 124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.125 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
124P.10.8 REDUCERS 21 136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
136P.3 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
136P.4 ACCESS PIPE AND COVER SINGLE SOCKET 27 136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 27 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
136P.6 ACCESS PIPE AND COVER SINGLE SOCKET 27 139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
139P.3 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 411T.125 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
139P.4 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 411T.125 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
139P.6 ACCESS PIPE AND COVER SINGLE SOCKET 26 139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 411T.125 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
139P.8 ACESS PIPE AND COVER 21 139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 411T.125 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
139P.10 ACESS PIPE AND COVER 21 411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 411T.125 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
411AS.15 BOTTLE TRAP ANTI-SYPHON 45 411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 411T.125 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
411AS.125 BOTTLE TRAP ANTI-SYPHON 45 411T.15 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 411T.125 BOTTLE TRAP - ADJUSTABLE TELESCOPIC 45 421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
411T.15BOTTLE TRAP - ADJUSTABLE TELESCOPIC45411T.125BOTTLE TRAP - ADJUSTABLE TELESCOPIC45421AS.15BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC45421AS.125BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC45	
411T.125BOTTLE TRAP - ADJUSTABLE TELESCOPIC45421AS.15BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC45421AS.125BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC45	
421AS.15 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45 421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
421AS.125 BOTTLE TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 45	
431AS.15 TUBULAR SWIVEL P TRAP ANTI-SYPHON 46	
431AS.125 TUBULAR SWIVEL P TRAP ANTI-SYPHON 46	
431T.15 TUBULAR SWIVEL P TRAP - ADJUSTABLE TELESCOPIC 46	
431T.125 TUBULAR SWIVEL P TRAP - ADJUSTABLE TELESCOPIC 46	
431TAS.15 TUBULAR SWIVEL P TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 46	
431TAS.125 TUBULAR SWIVEL P TRAP ANTI-SYPHON - ADJUSTABLE TELESCOPIC 46	
433AS.15 WASHING MACHINE HALF TRAP ANTI-SYPHON 47	
434AS.15 WASHING MACHINE TRAP ANTI-SYPHON WITH UPSTAND 47	
445AS.15 RUNNING TRAP ANTI-SYPHON 47	
445AS.125 RUNNING TRAP ANTI-SYPHON 47	
491P.4.90 LONG 90° WC CONNECTOR FIN SEAL 50	
493P.00 EXTENSION 200MM 50	
494P1.4.00 40MM OFFSET WC CONNECTOR FIN SEAL 49	
494P2.4.00 12MM OFFSET WC CONNECTOR FIN SEAL 49	
495P.4.90 90° WC CONNECTOR WITH BOSS FIN SEAL 50	
496P.4.90 SWAN NECK WC CONNECTOR 90° FIN SEAL 49	
498P.4.030 SWIVEL CONNECTOR 0-30° FIN SEAL 49	
499P.4.00 STRAIGHT WC CONNECTOR FIN SEAL 49	
499P.4.90 90° WC CONNECTOR FIN SEAL BEND 49	
499P.4.104 14° WC CONNECTOR FIN SEAL SPIGOTS 49	
4DW200 ADAPTOR TO UNDERGROUND DRAIN 35	

Code	Product Description	Page No.
4DW3	ADAPTOR TO UNDERGROUND DRAIN	14
6592/DVW	ACCESS DOOR WITH TEST NIPPLE	9
6592/DVW	ACCESS DOOR WITH TEST NIPPLE	27
F497.35.09	WC FRAME MANIFOLD BEND CONNECTORS FIN SEAL SPIGOT	50
F497.35.18	WC FRAME MANIFOLD BEND CONNECTORS FIN SEAL SPIGOT	50
F497.35.29	WC FRAME MANIFOLD BEND CONNECTORS FIN SEAL SPIGOT	50

Notes

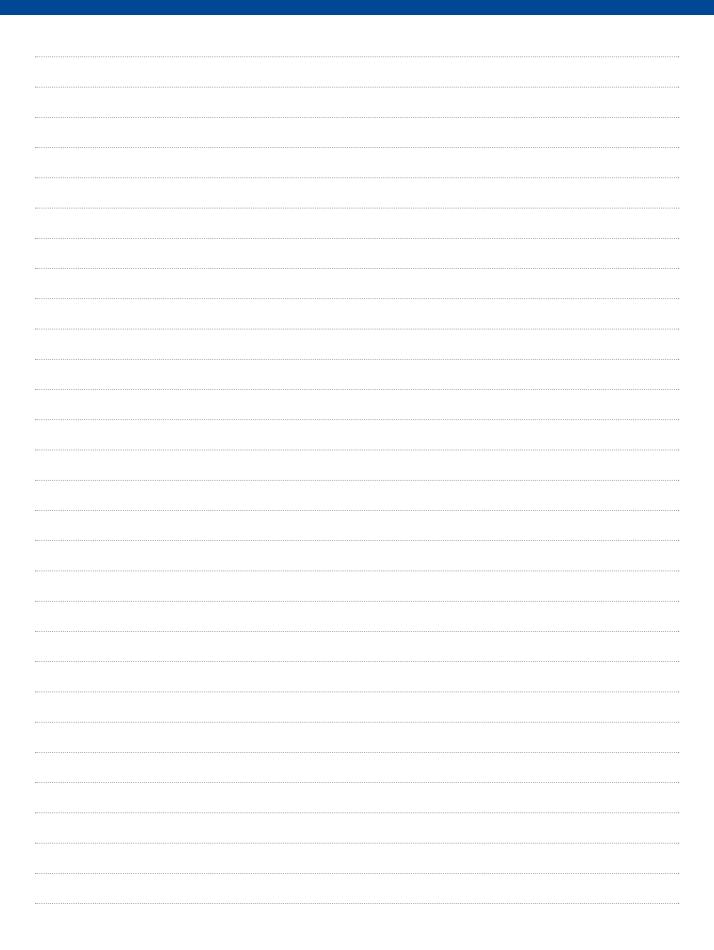

Notes

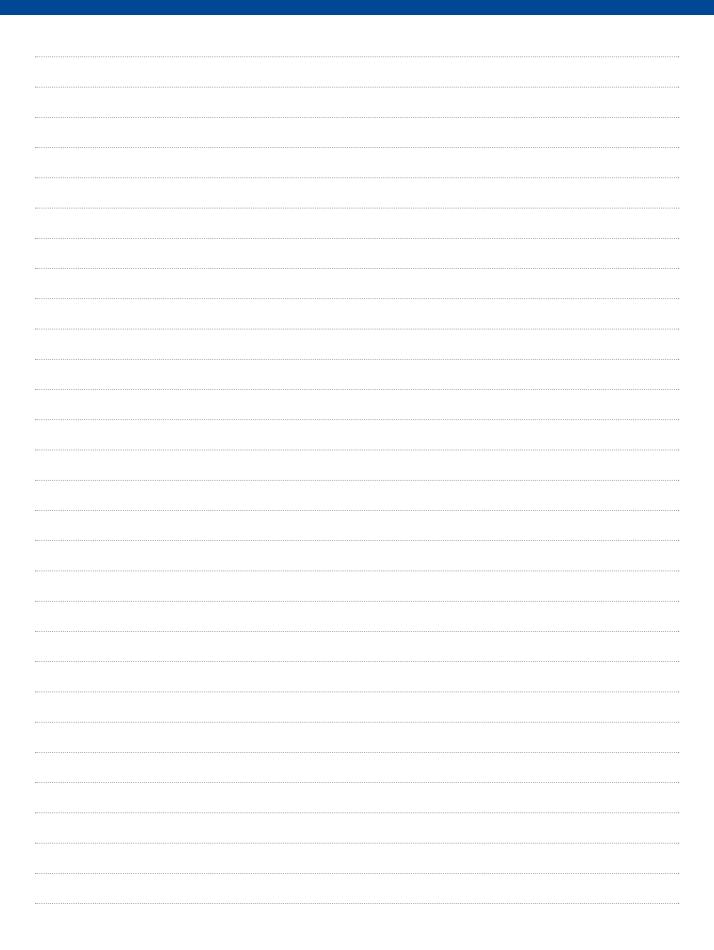



Terrain Above Ground

Polypipe Qatar

Polypipe Ltd **RTO Office** Commercial Bank Plaza Tower Level 14, West Bay

P.O.Box 27111

Doha

Qatar

Tel: +974 (4) 452 8394

Fax: +971 (4) 452 8181

middleeast@polypipe.com

Polypipe Middle East

Polypipe Middle East FZE Showroom A2 SR 07 First Al Khail Street Jebel Ali Free Zone P.O.Box 18679

Dubai

United Arab Emirates Tel: +971 (0)4 807 3000

Fax: +971 (0)4 880 6681

middleeast@polypipe.com

Polypipe UK

New Hythe Business Park College Road Aylesford Kent ME20 7PJ United Kingdom Tel: +44 (0) 1622 795 200

Fax: +44 (0) 1622 795 263

